
TECHNICAL DRAWING SPOTS

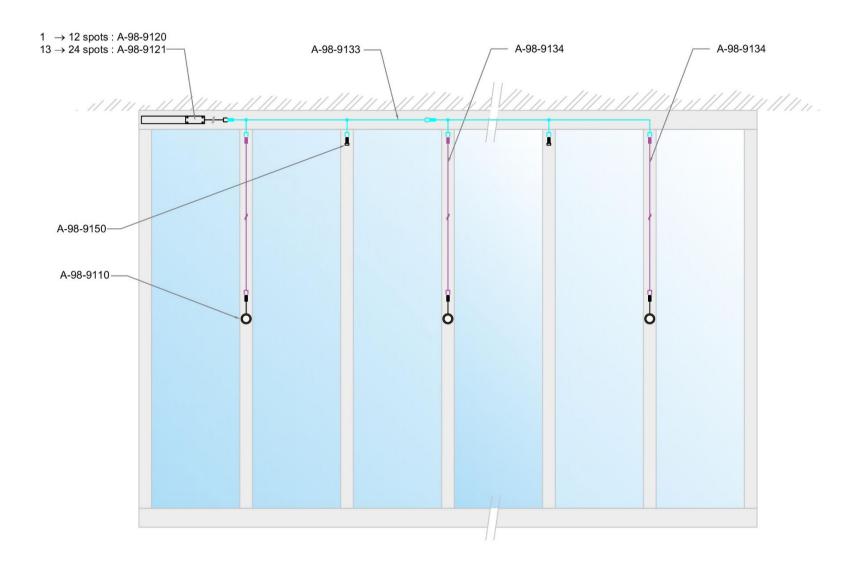





Components spots

| A-98-9110 | LED spot |
|-----------|--|
| A-98-9120 | Driver with remote control 1-12 spots |
| A-98-9121 | Driver with remote control 13-24 spots |
| A-98-9132 | T-cable |
| A-98-9133 | Triple output cable |
| A-98-9134 | Extension cable 3m |
| A-98-9150 | End cap |



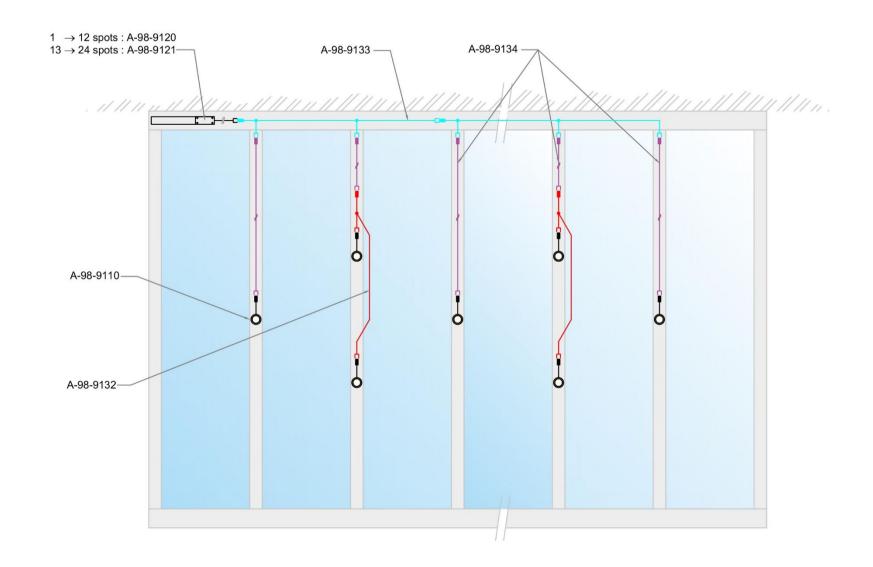

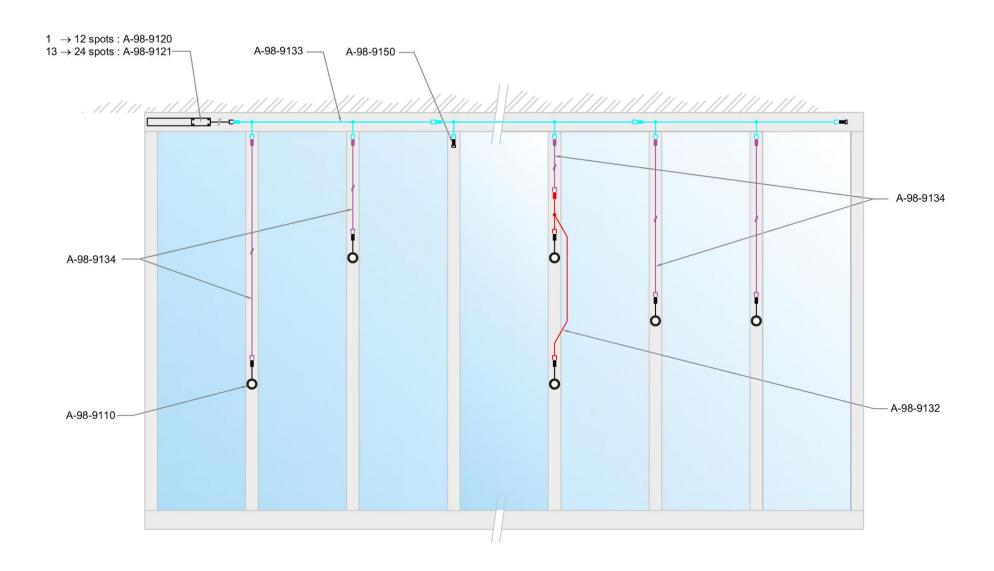



Installation sequence

- 1. Insert the required number of extension cables A-98-9134 into the bars. Where required, combine them with the splitter A-98-9132.
- 2. Connect the LED spots A-98-9110 and click them into place.
- 3. Place the prepared light beams close to their final position. Connect the extension cables to the distributor cables A-98-9133 and the driver A-98-9120 (or A-98-9121).
- 4. Use the waterproof end cap (A-98-9150) where no spotlight or other cable is connected to keep the circuit waterproof.

Product installation must be performed by qualified personnel only!