

Montagehandleiding / Montageanleitung /
Notice de montage / Assembly instructions

LOUVANTE



Pallazzo
Esp 440
5633 AJ Eindhoven
T 040 264 64 94 - F 040 264 64 95
info@pallazzooveranda.nl - www.pallazzooveranda.nl

Montagehandleiding Pallazzo Louvante versie 1

Deze montagehandleiding is met de grootst mogelijk zorg samengesteld. Een laatste versie is te verkrijgen op de website van Pallazzo. Deze montagehandleiding is onderdeel van de Pallazzo prijslijst en maakt onderdeel uit van onze algemene voorwaarden. Aan deze montagehandleiding kan geen rechten ontleend worden.

Montageanleitung Pallazzo Louvante Version 1

Diese Montageanleitung wurde mit größtmöglicher Sorgfalt erstellt. Die neueste Version ist auf der Website von Pallazzo verfügbar. Diese Montageanleitung ist Bestandteil der Pallazzo-Preisliste und gehört zu unseren allgemeinen Bedingungen. Aus dieser Installationsanleitung können keine Rechte abgeleitet werden.



Notice de montage Pallazzo Louvante version 1

Ce notice de montage a été composé avec le plus grand soin. La dernière version est disponible sur le site web de Pallazzo. Cette instruction de montage fait partie de la liste de prix du Pallazzo et fait partie de nos conditions générales. Aucun droit ne peut être tiré de ces instructions d'installation.













Assembly instructions Pallazzo Louvante version 1

This assembly manual has been compiled with the greatest possible care. A latest version can be obtained on the website of Pallazzo. This assembly instruction is part of the Pallazzo price list and forms part of our general terms and conditions. No rights can be derived from these installation instructions.


Tools

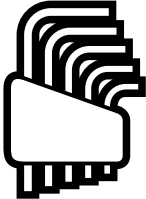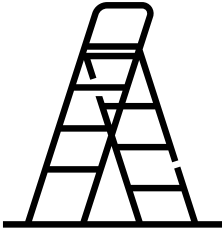	10m 		2x 
---	--	---	---



Profielen / Profile / Profils / Profiles

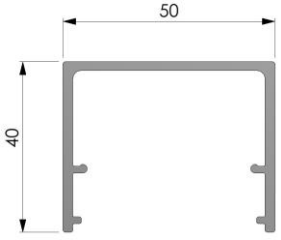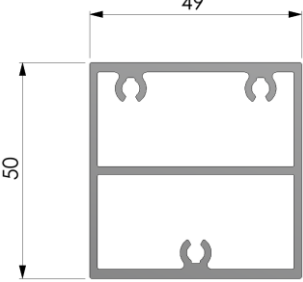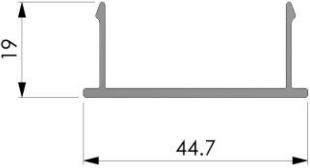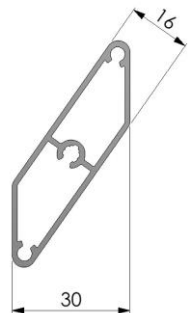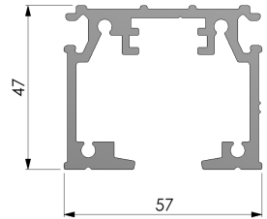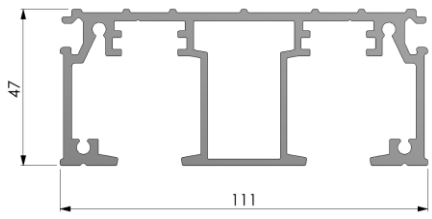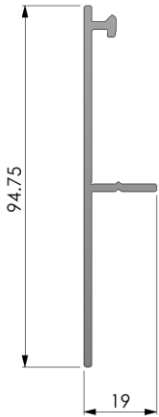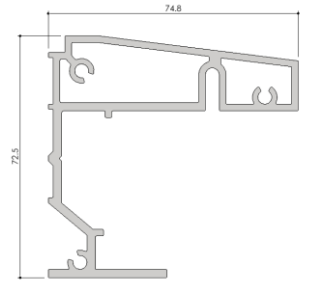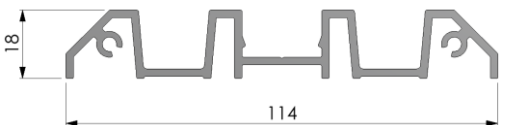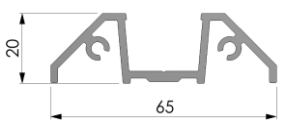			
N89009F	N89011	N89012	N89936
			
N89937	N89938	N89939	N89948
			
N89940	N89941	N89942	P-00-500


Accessoires / Zubehör / Accessories

			 4,8 x 22
V59189	V59190	V59194	V70412
			
V72153	V72156	V72162	V70384
 Ø5			
V72180	V90153	V70383	

Accessoires / Zubehör / Accessories

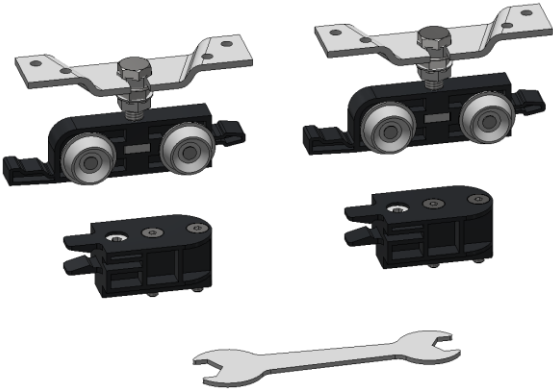		 M8 x 55	 M6 x 12
V90136		V70431	V70432
			
V70434	V70462	V90142	V90144

Optionele accessoires / Optioneel Zubehör / Optional accessories

			
V59199	V59200	V70407	V70408
	 4,2 x 16	 4,8 x 16	 4,8 x 22
V70409	V70410	A-98-W202	V70412
 4,8 x 38			
V70413	V72152	V72177	V72180


Optionele accessoires / Optioneel Zubehör / Optional accessories



V70385



V70386

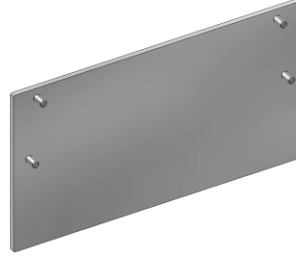

V70387



V90145



V90146






V90137



V90141


Warning

If an extra profile is mounted under the ring beam (sliding door guide, screen, etc.), water may seep in between this profile and the ring beam. Prevent this by using sealant or a sealing tape on the outside of the roof.

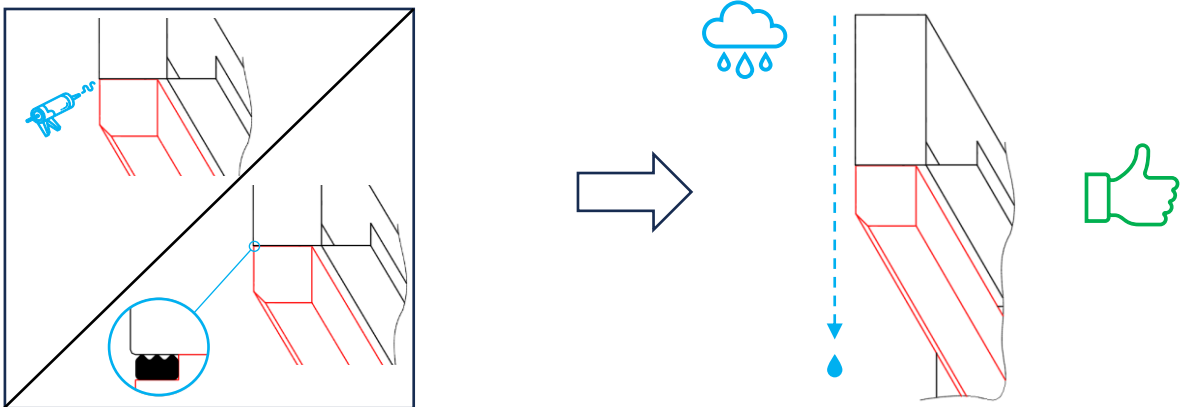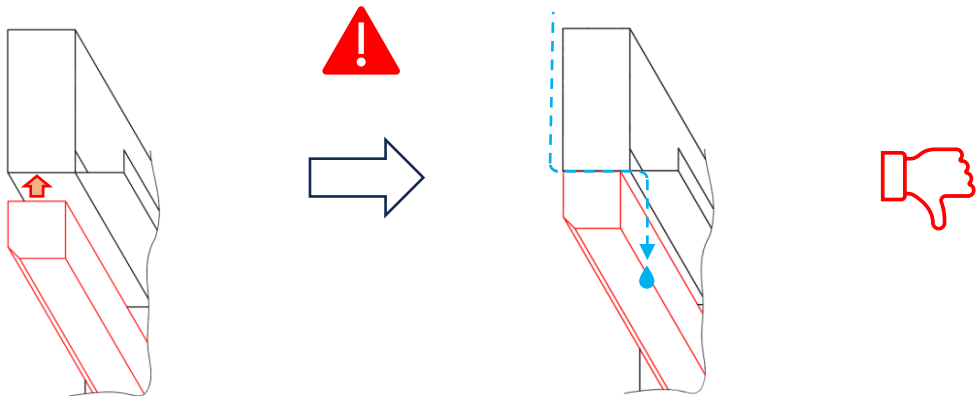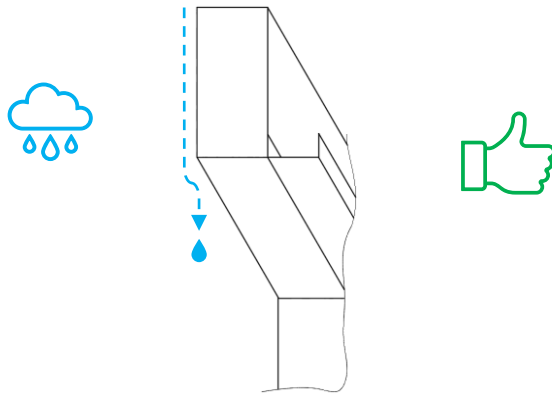


Doorsnedes/Schnitte/Sections

Enkel/Singular/Unique

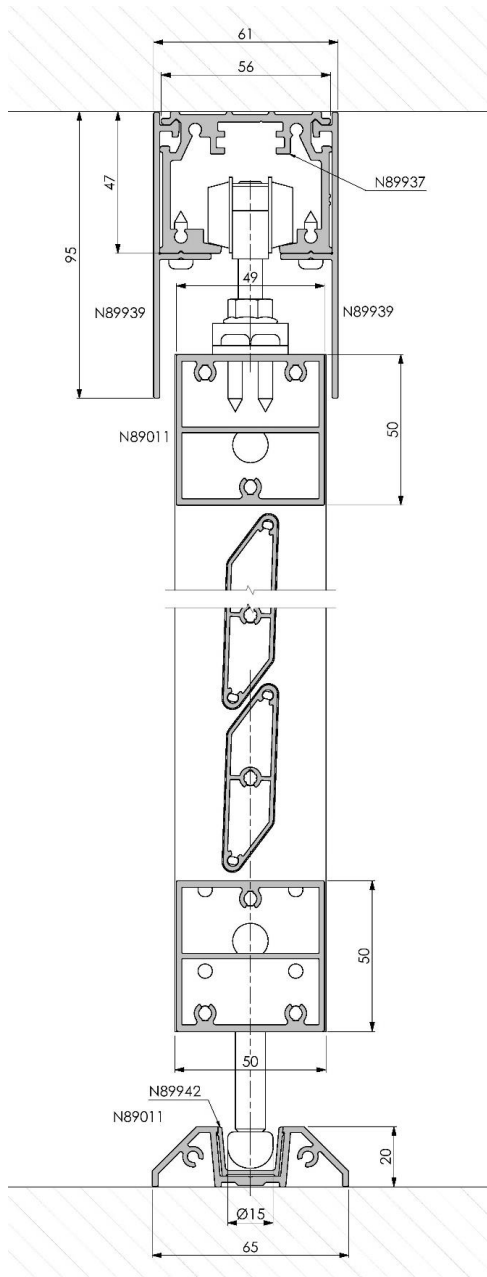


Dubbel/Doppelt/Double

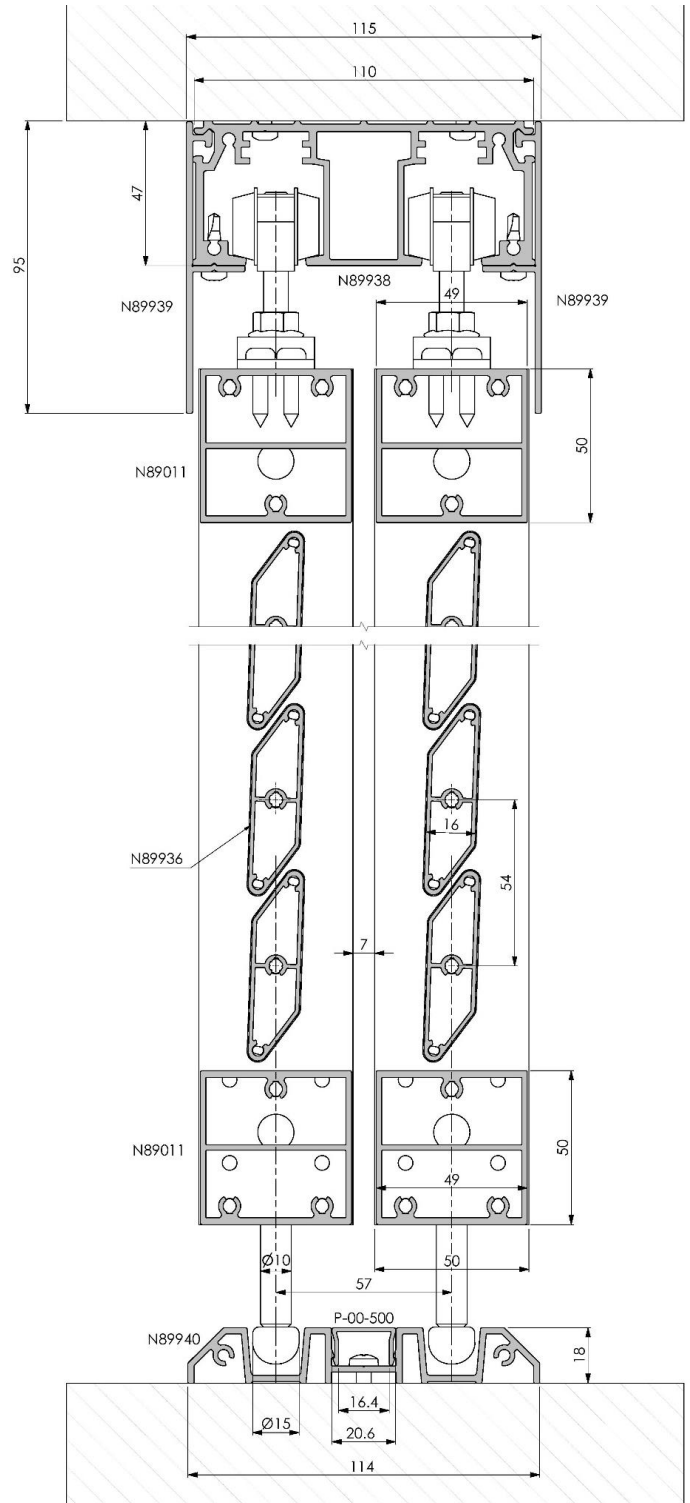


Doorsnedes/Schnitte/Sections




Wandmontage/Wall mounting/ Montage mural

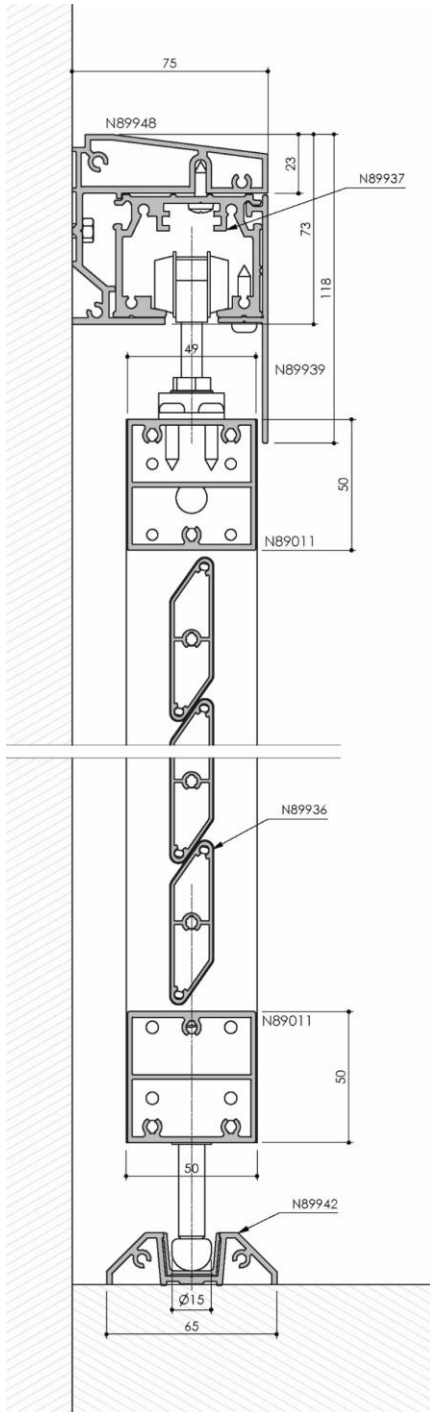



Algemeen / Allgemein / Général / General

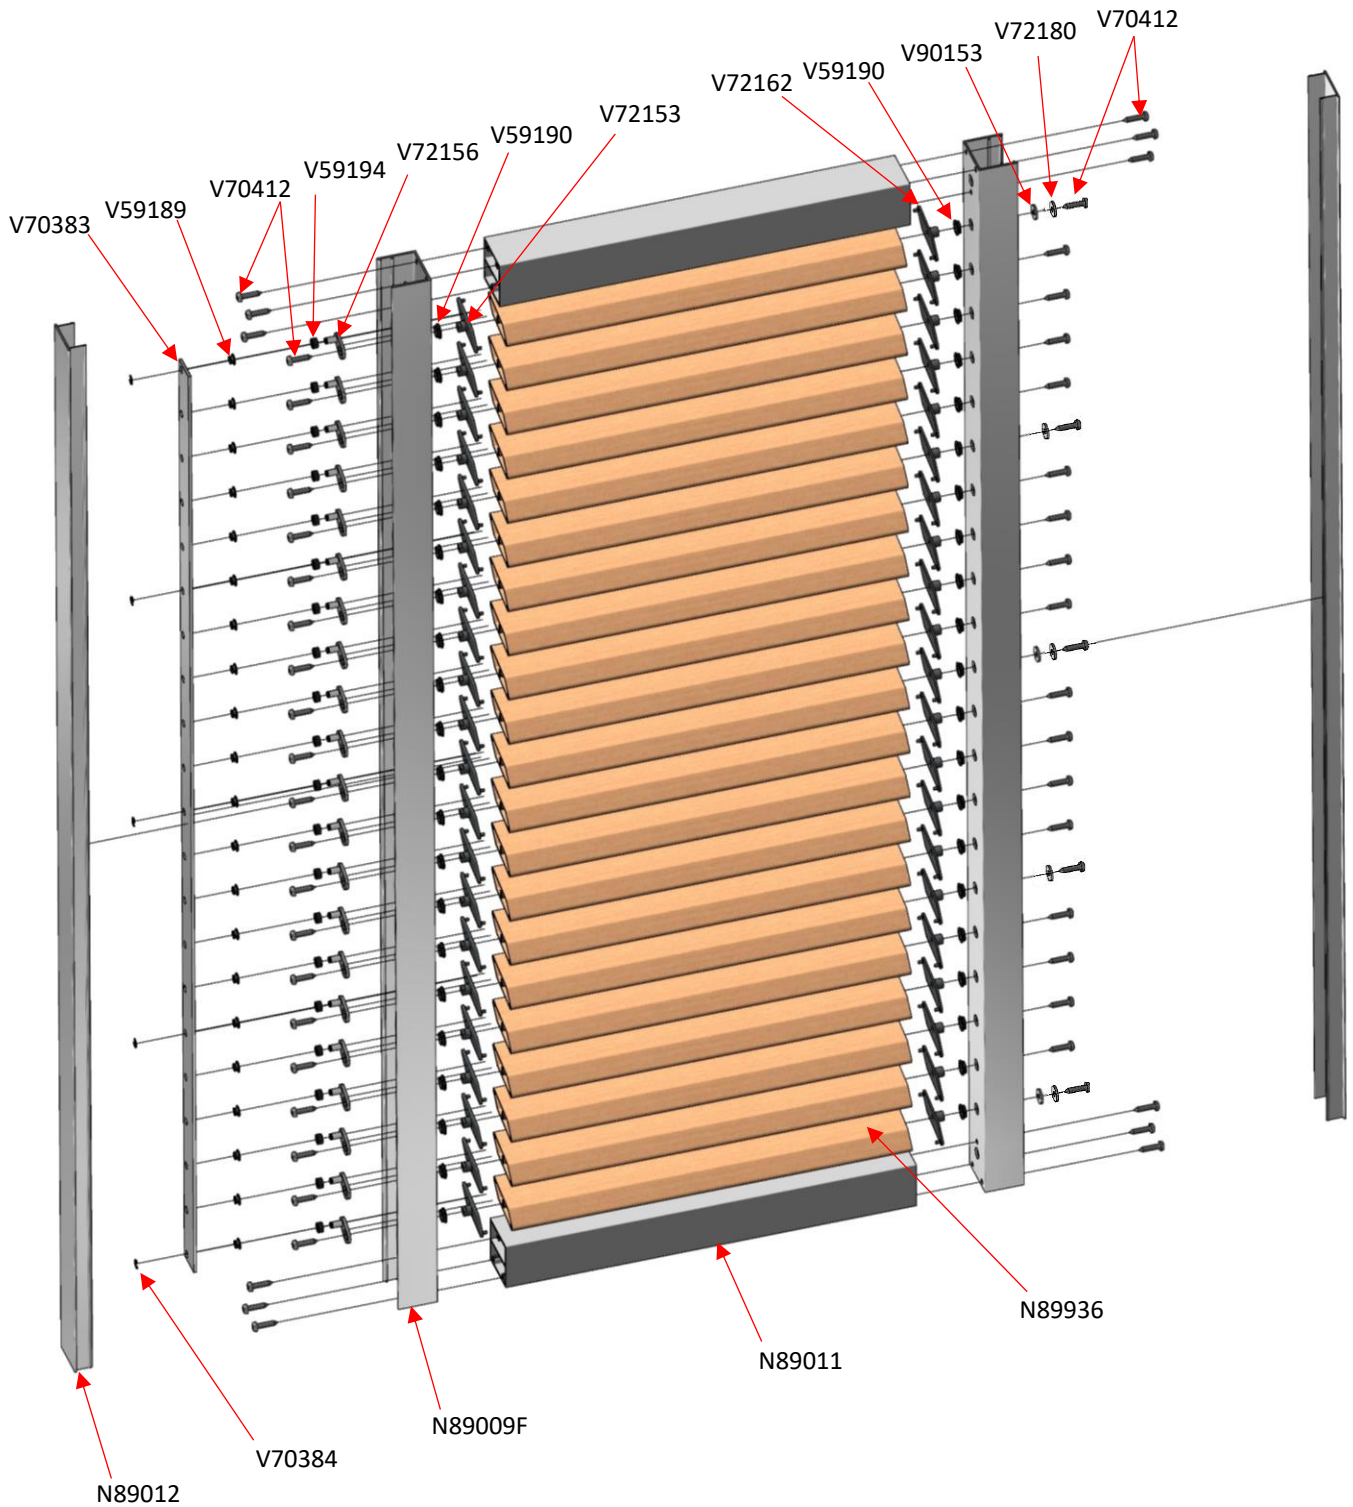


Algemeen / Allgemein / Général / General

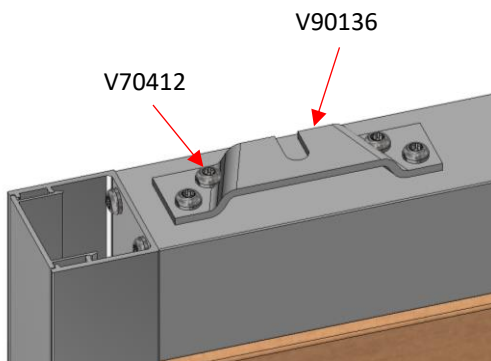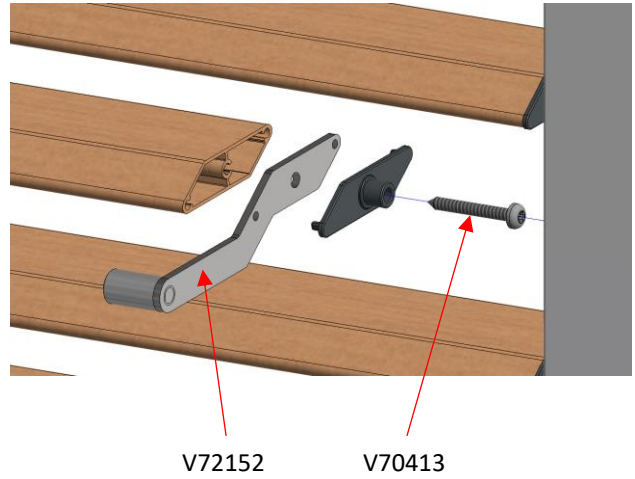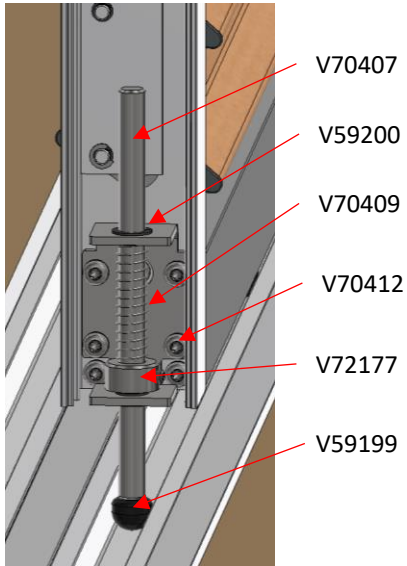


Installation – Double Louvante

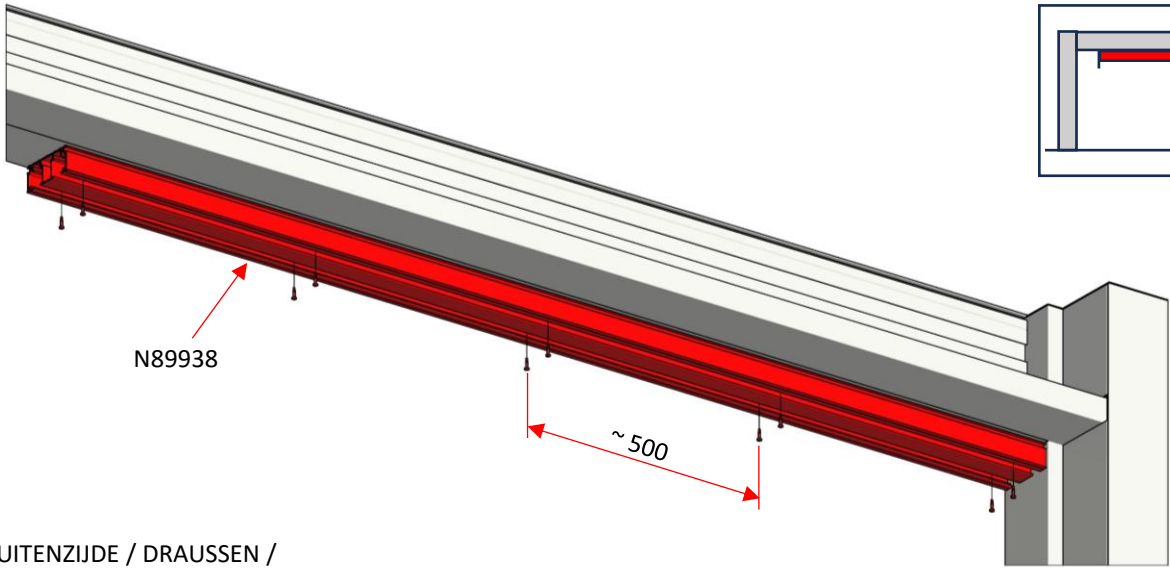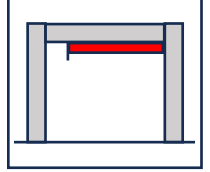






BUITENZIJD / DRAUSSEN /
A L'EXTERIEUR / OUTSIDE

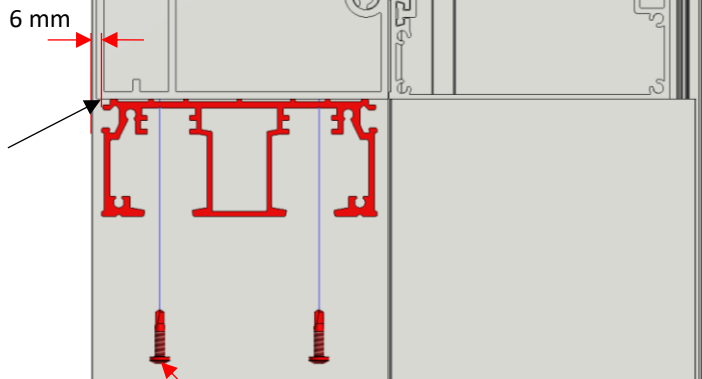




SCHROEF / SCHRAUBEN / VIS / SCREW 4,2
x 19

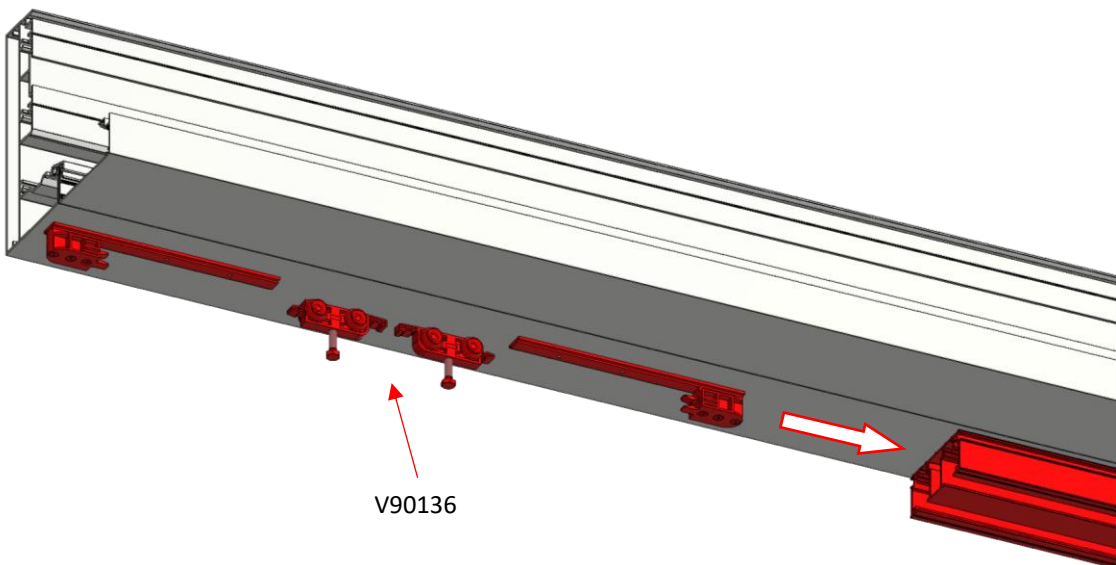

Installation – Double Louvante

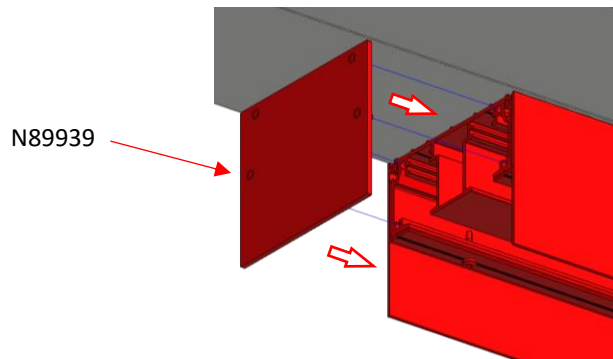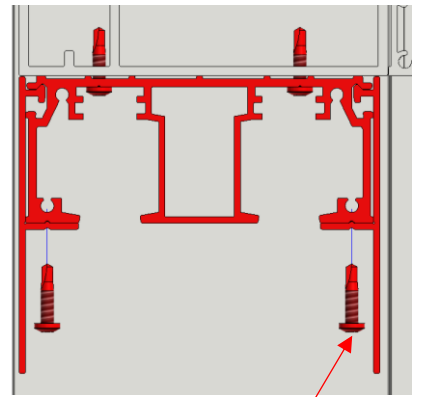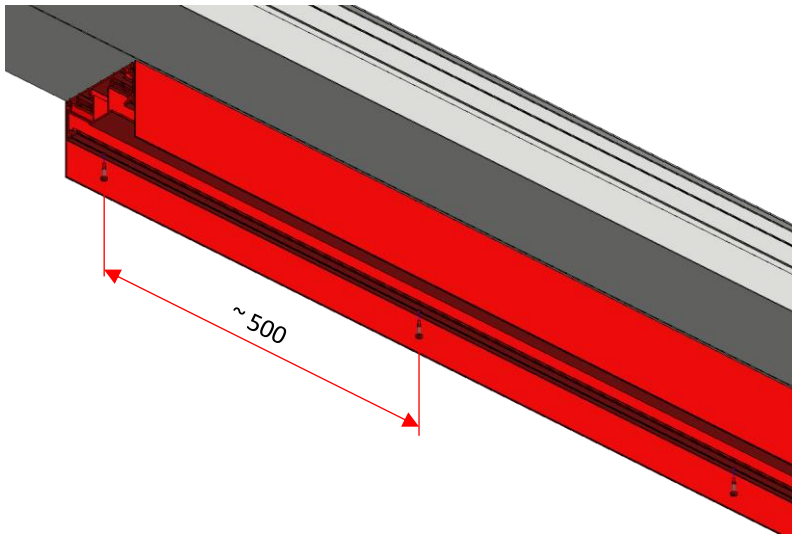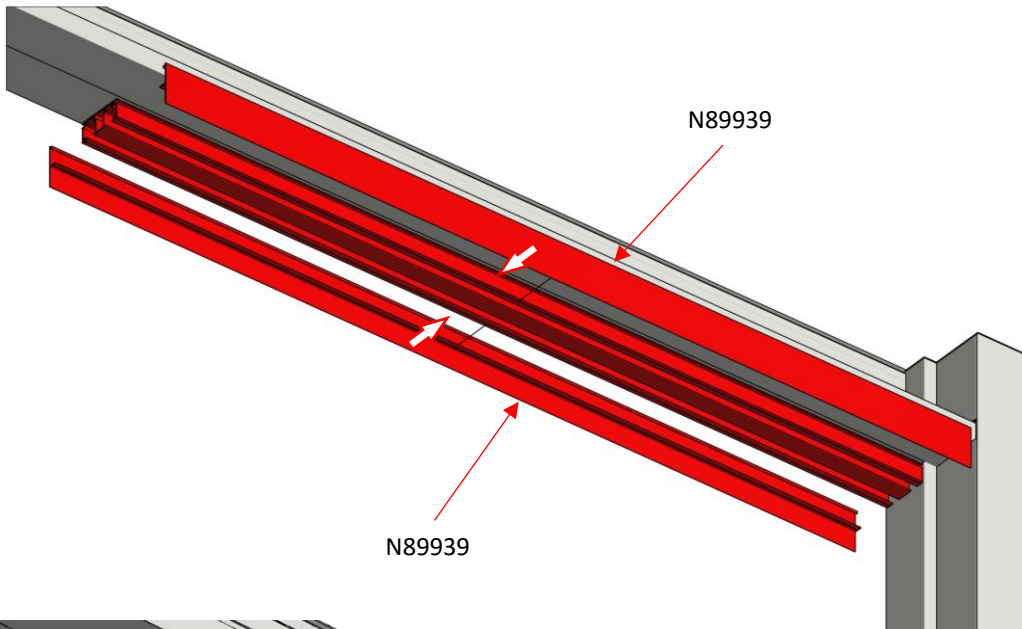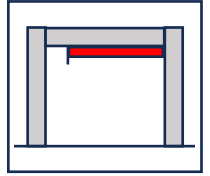


Installation – Double Louvante




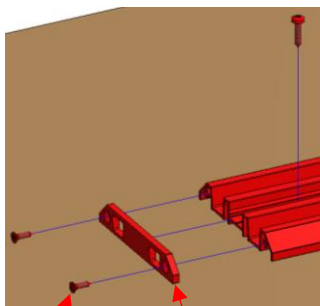
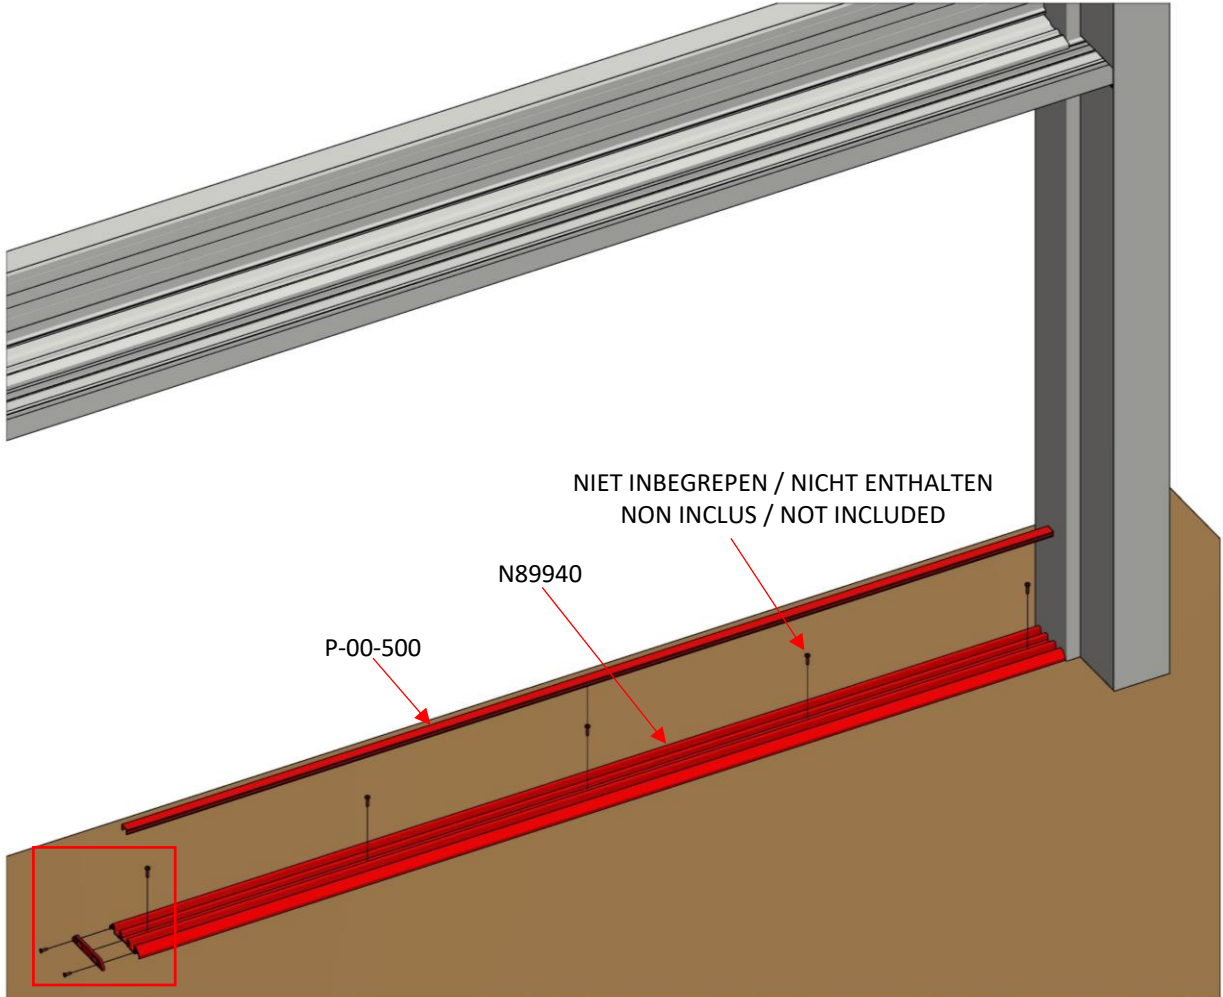
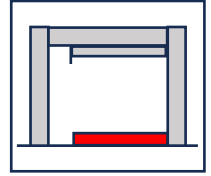


V70410






V90137

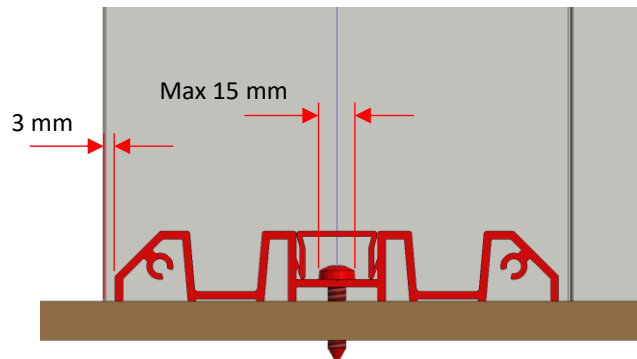





Installation – Single Louvante

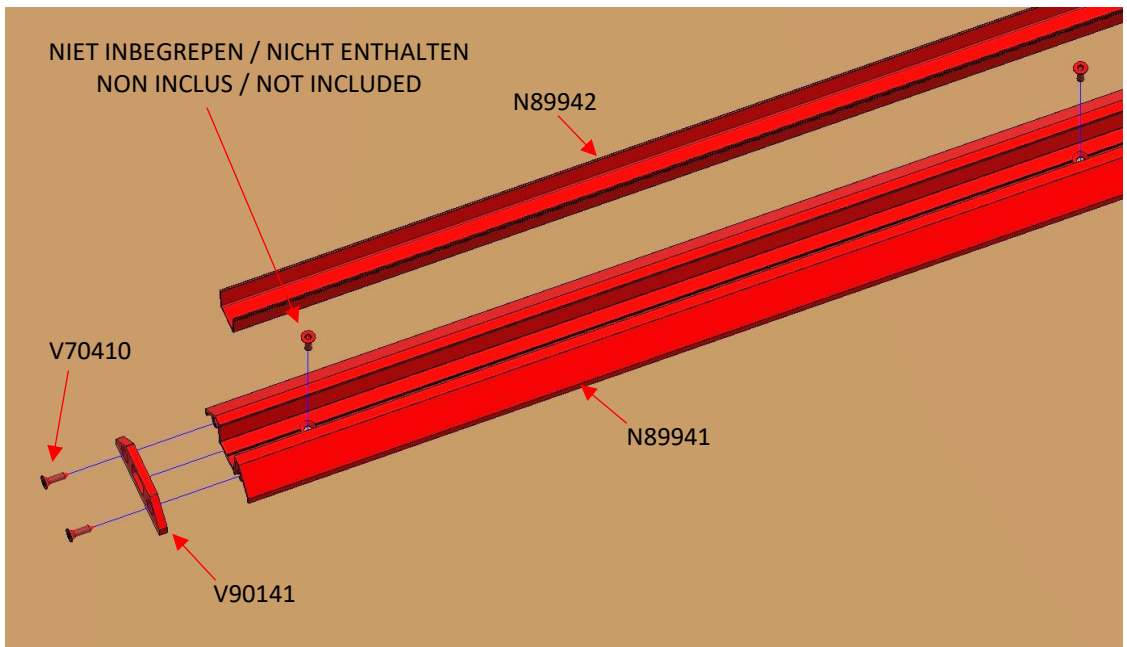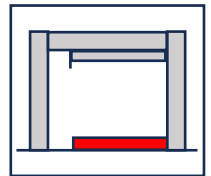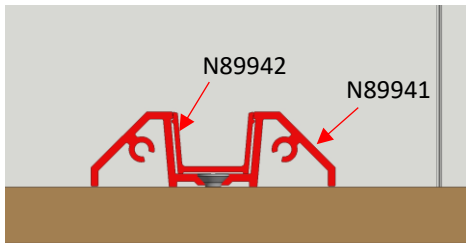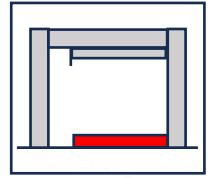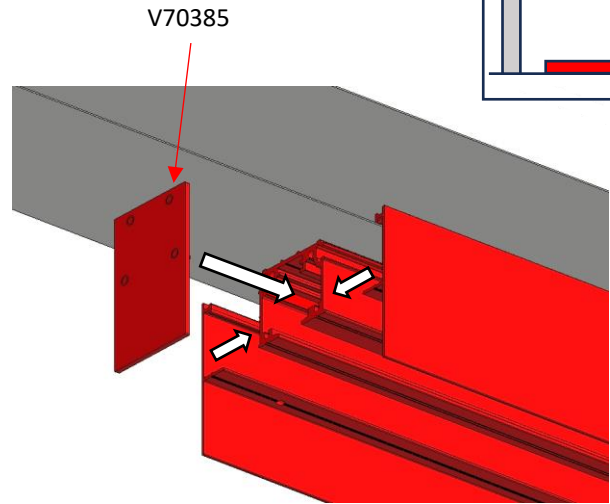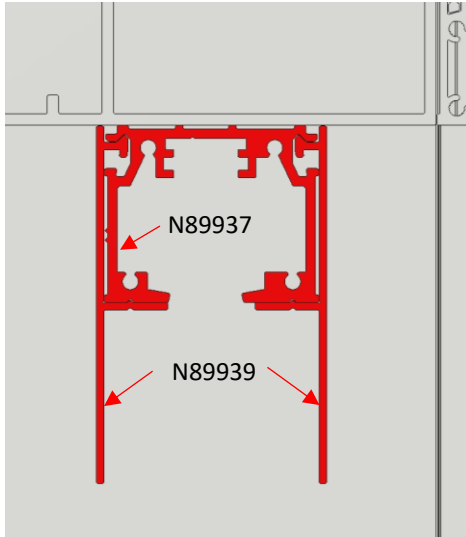



Installation – Single wall mounted Louvante

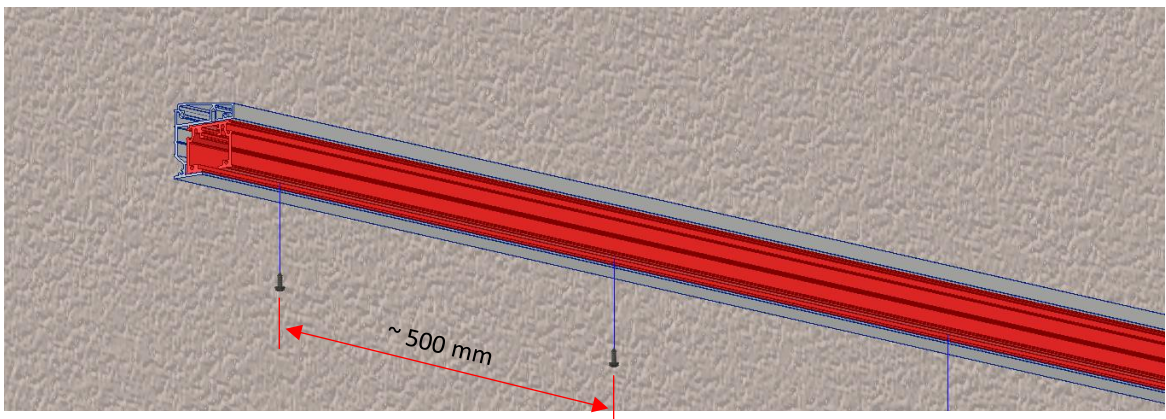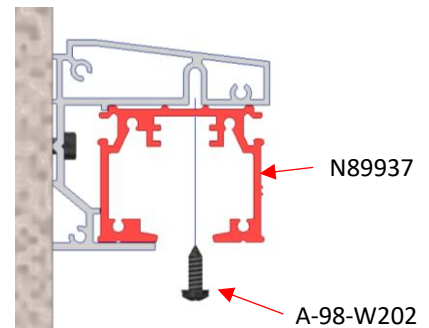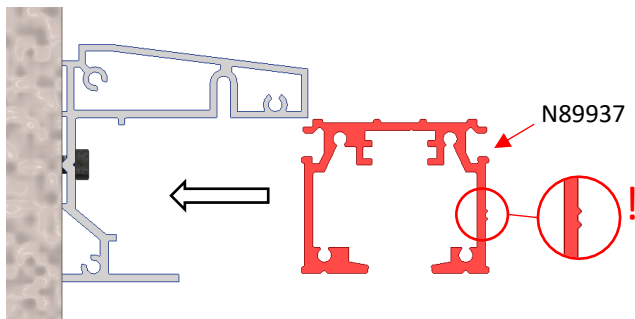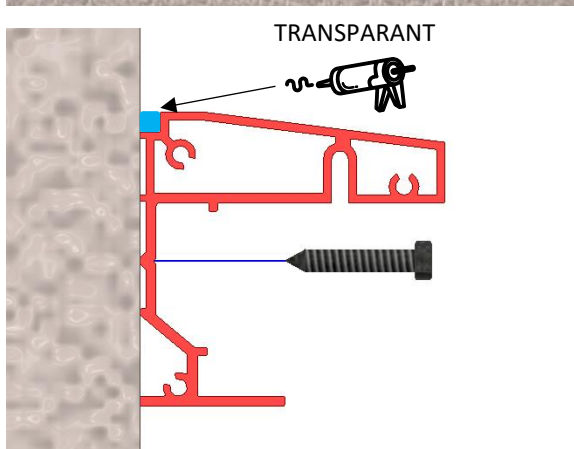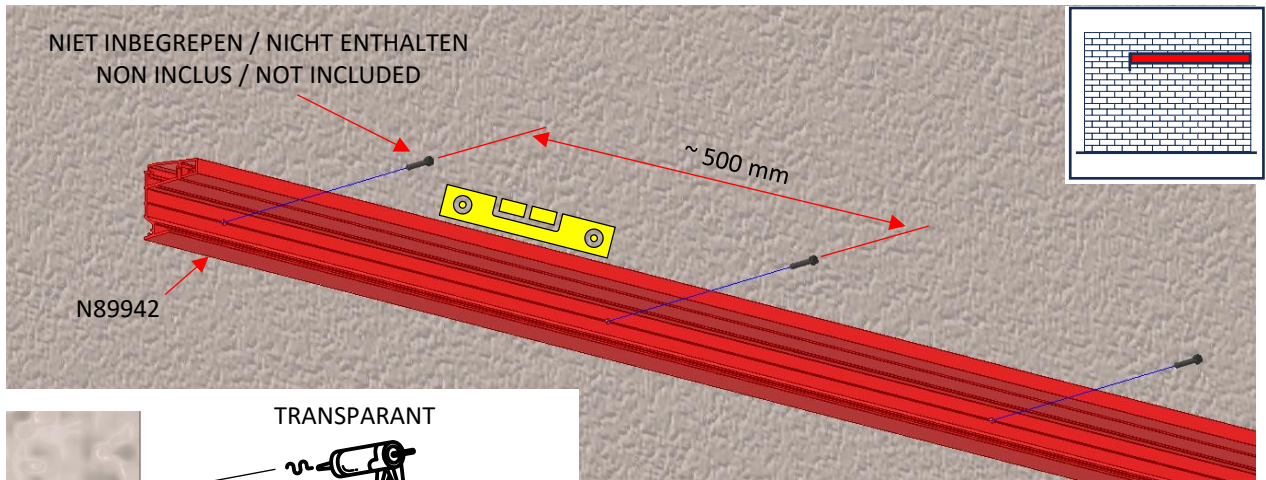



Installation – Single wall mounted Louvante

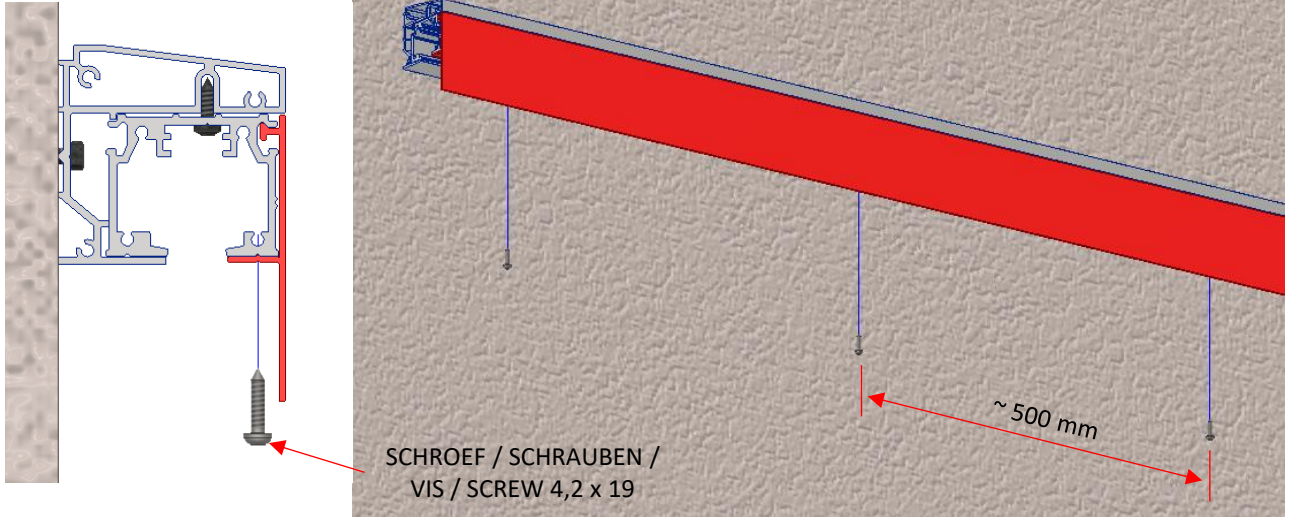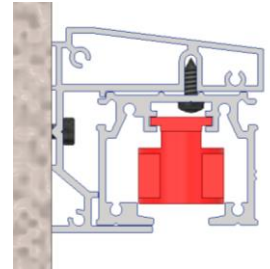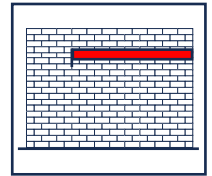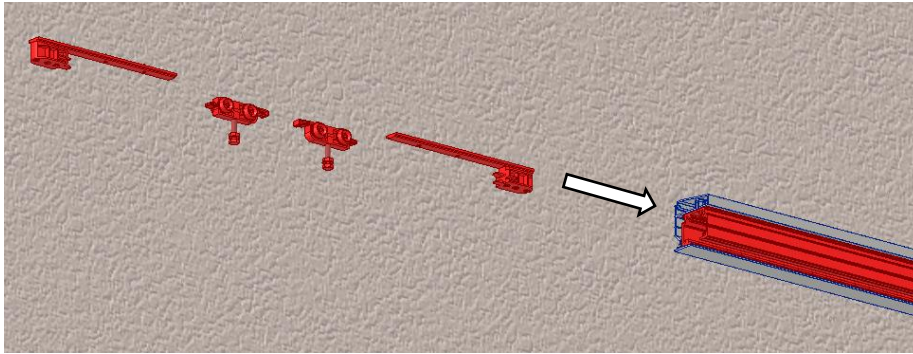

TRANSPARENT (IF NECESSARY)



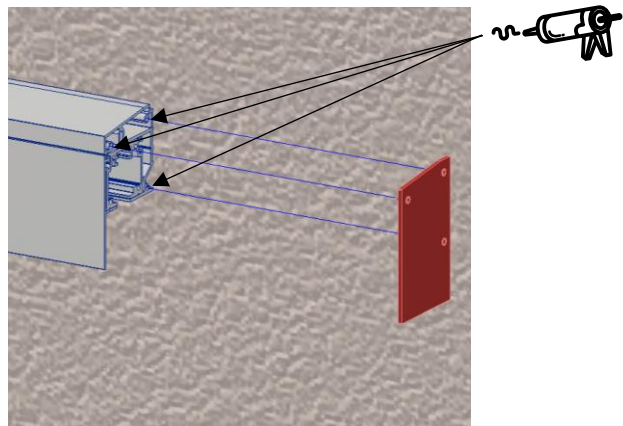
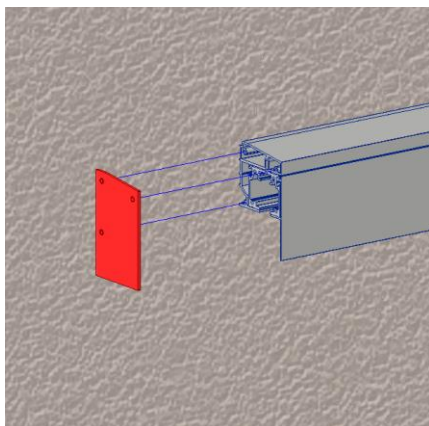


Installation – Single wall mounted Louvante


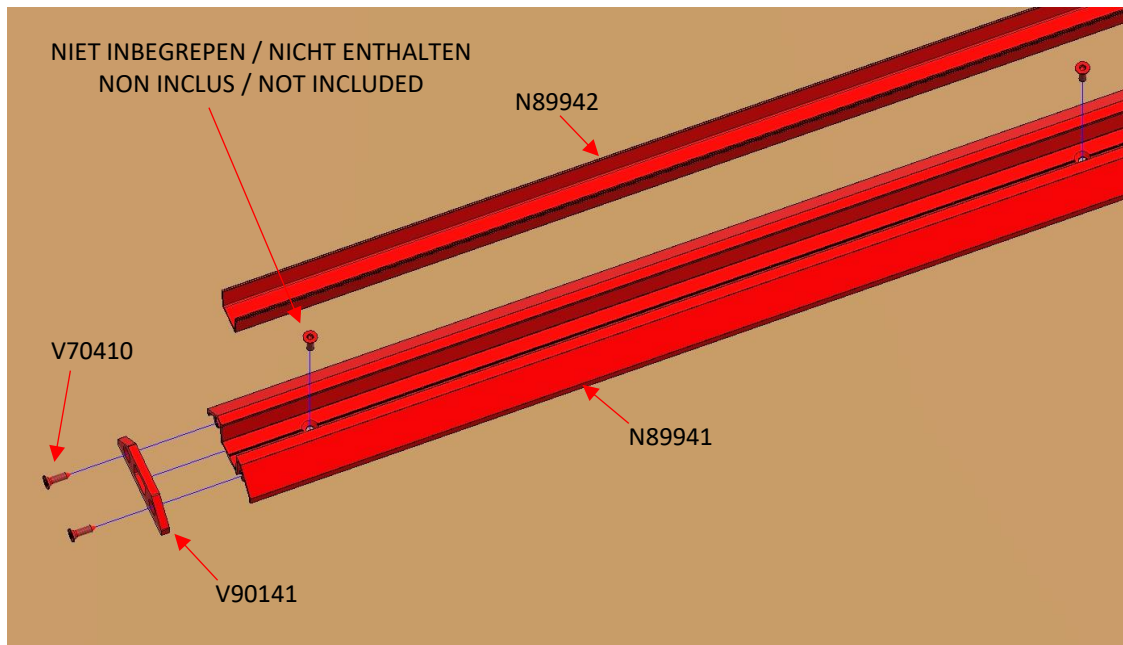
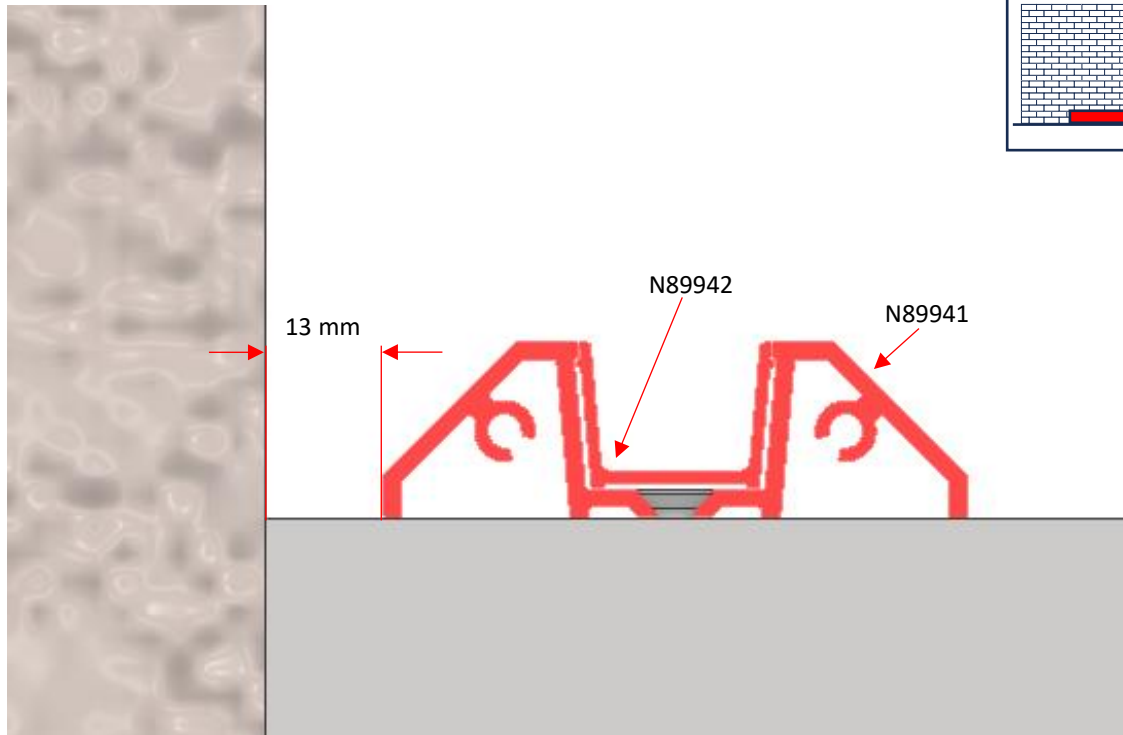


Installation – Louvante window


1

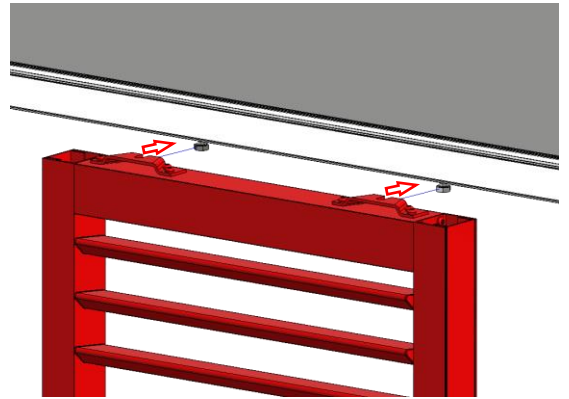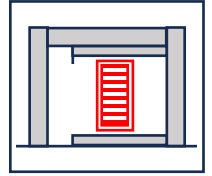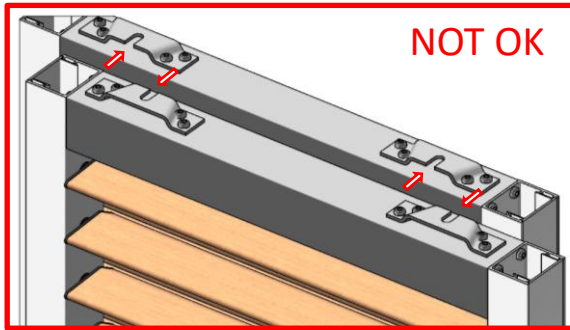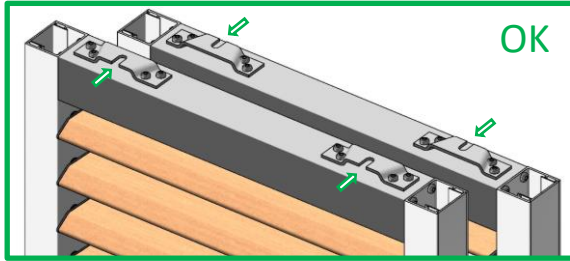




2

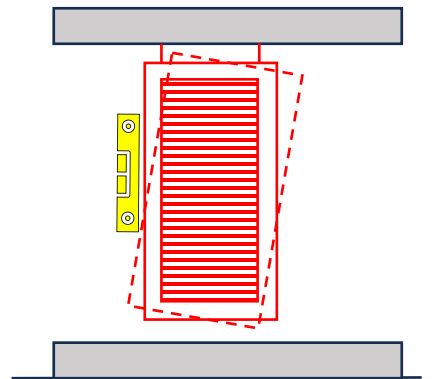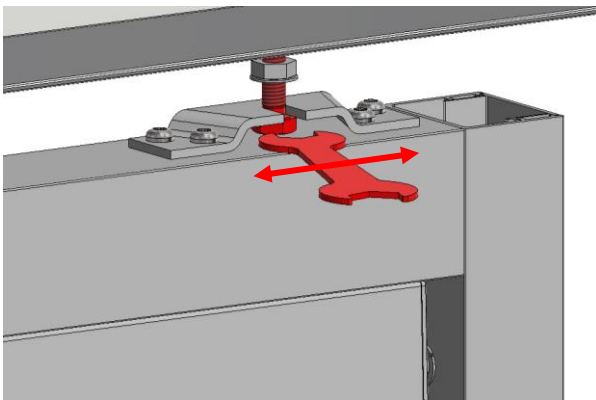


3

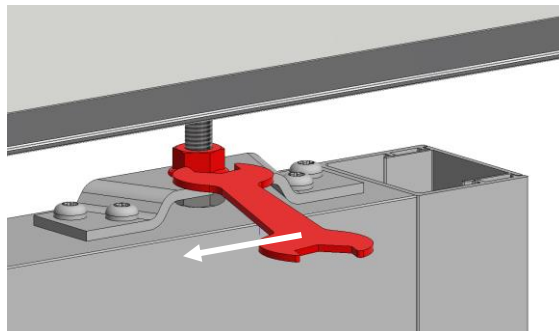


Installation – Louvante window

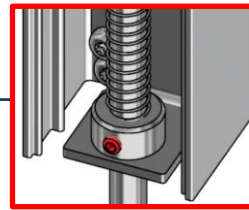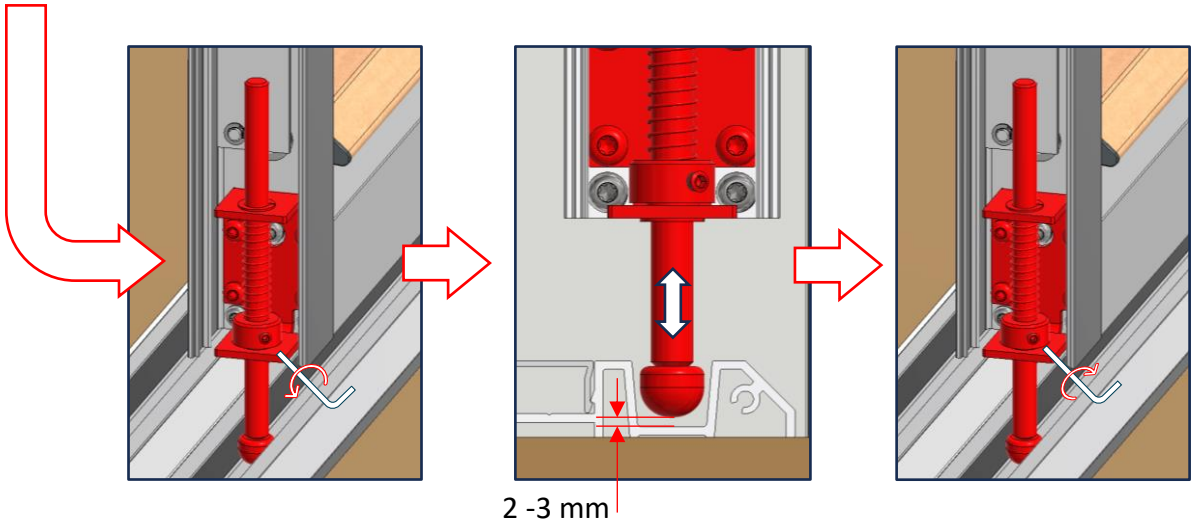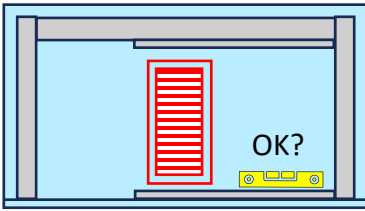


NOT OK

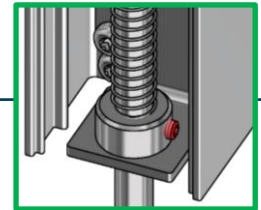



OK

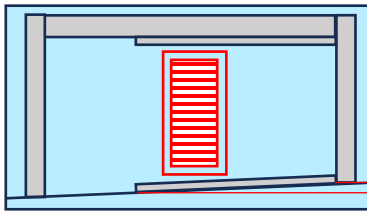









$\Delta = \text{max } 40 \text{ mm}$

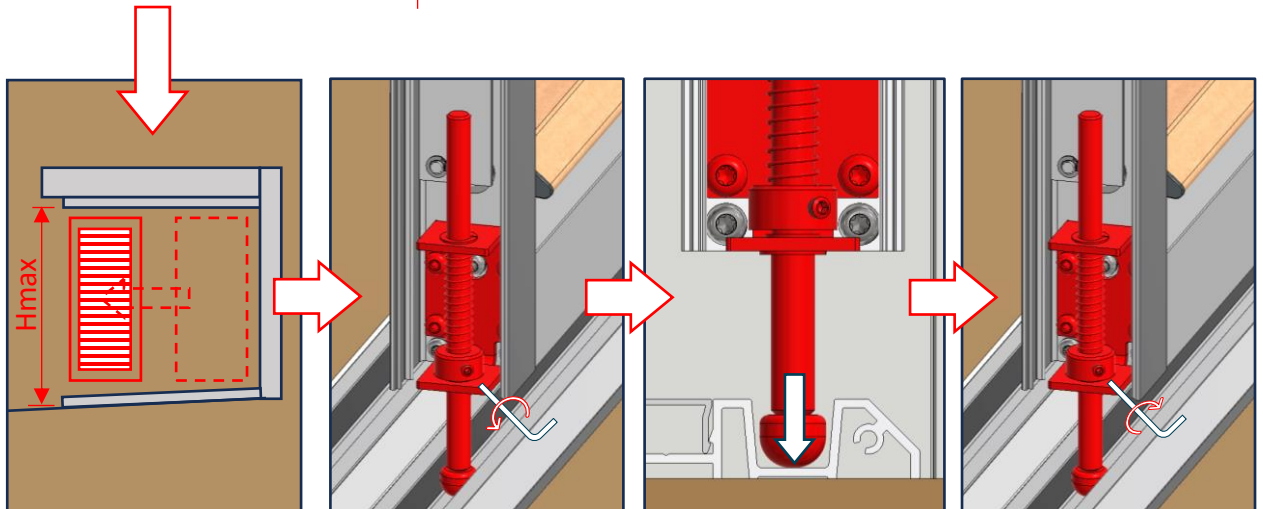







Stopper – End Puffer – Butée – End stop

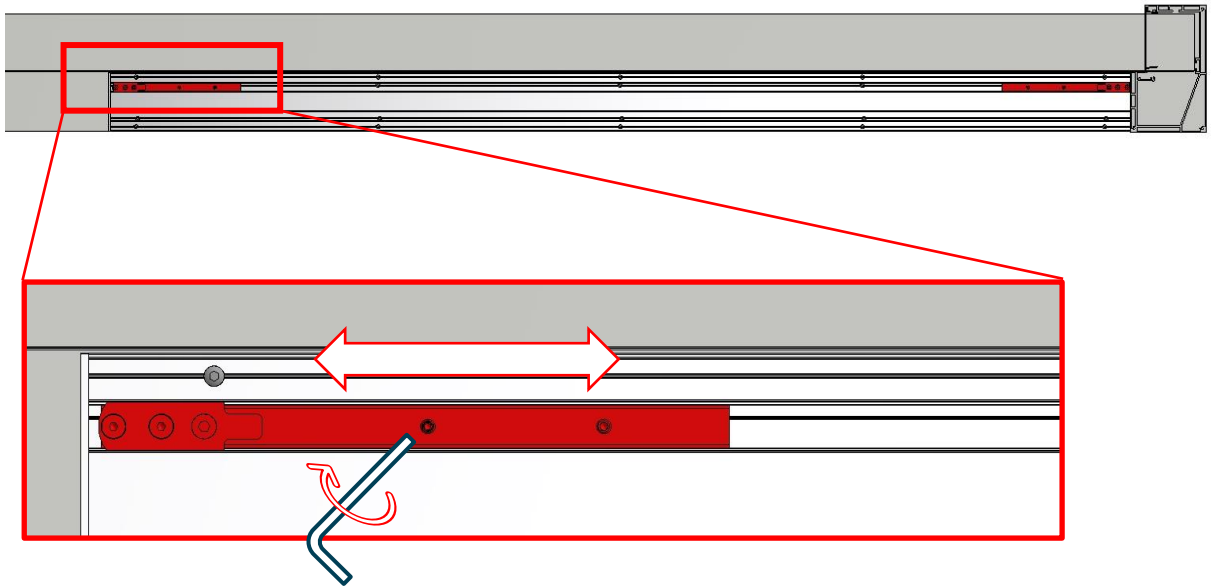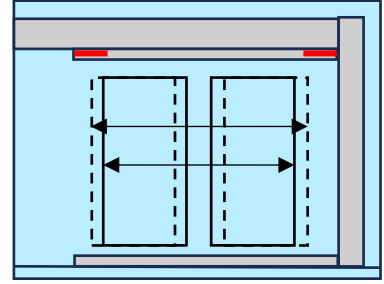

Toeassing – Anwendung – Application LOUNGE

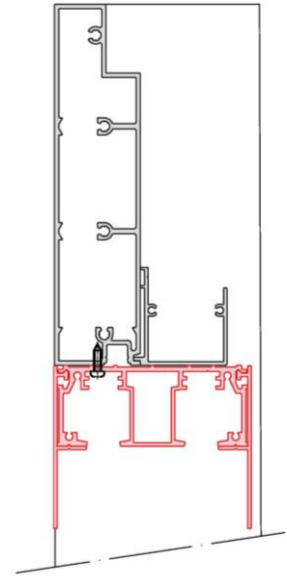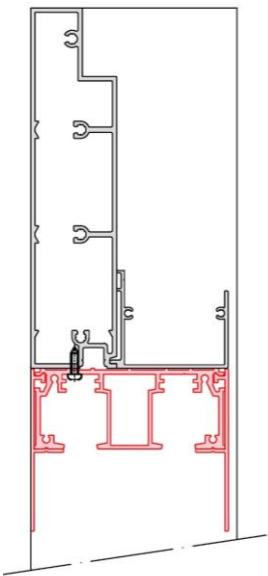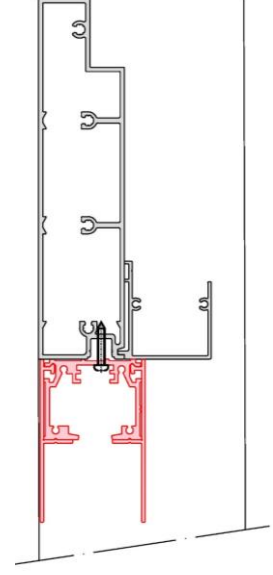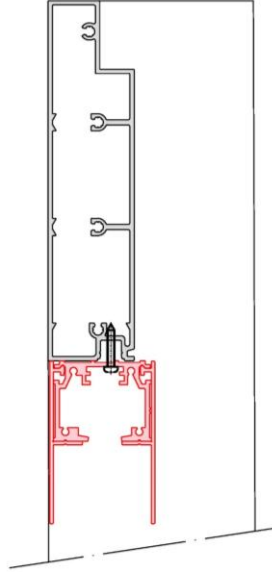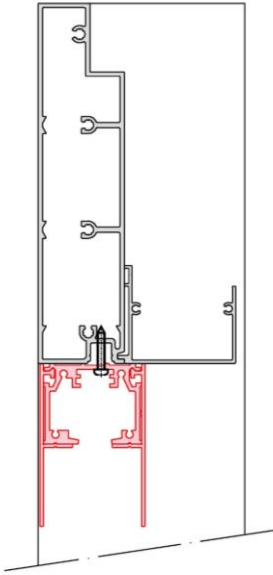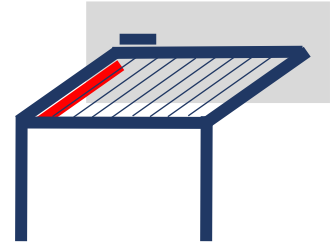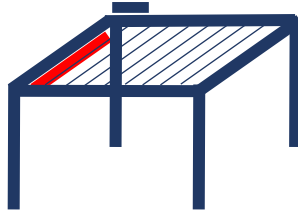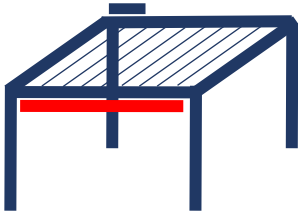

Toepassing – Anwendung – Application SQOPE

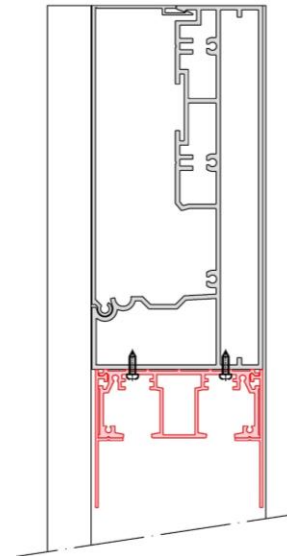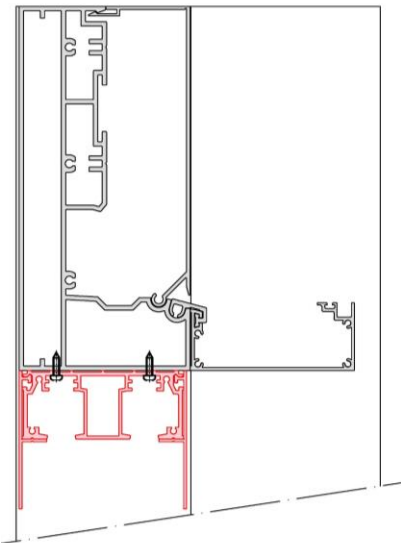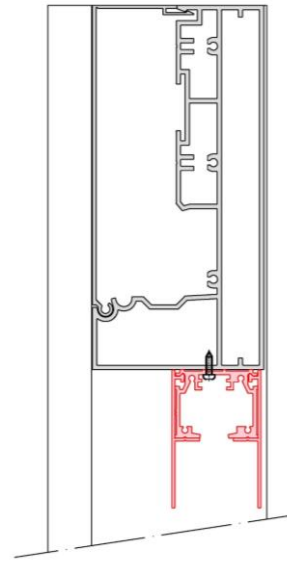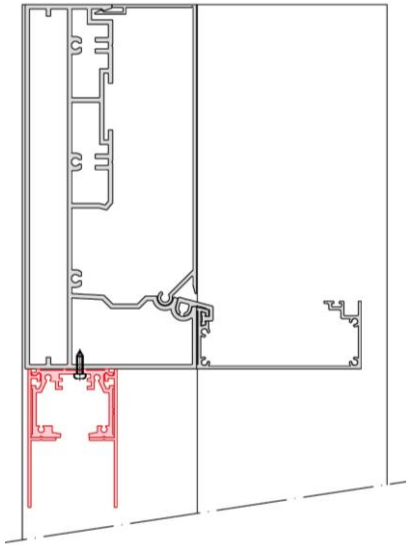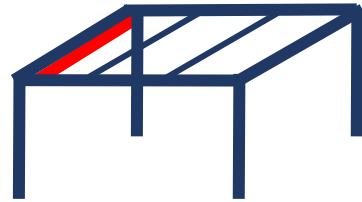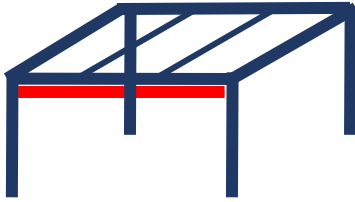


Breedte – Breite – Largeur – Width - combination

$$X \text{ Louvante} = (X \text{ tot} + 34) / 2$$

$$X \text{ tot} = 2500 \text{ mm} \rightarrow X \text{ Louvante} = (2500 + 34) / 2 = 1267 \text{ mm}$$


$$X \text{ tot} = 2766 \text{ mm} \rightarrow X \text{ Louvante} = (2766 + 34) / 2 = 1400 \text{ mm}$$

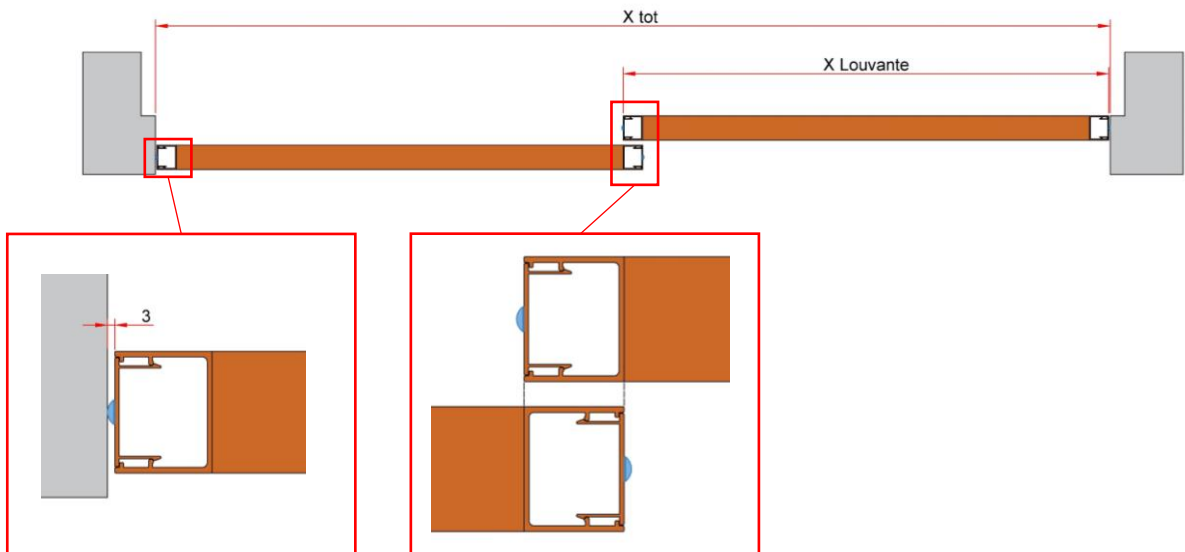

$$X \text{ Louvante} = (X \text{ tot} + 74) / 3$$

$$X \text{ tot} = 4000 \text{ mm} \rightarrow X \text{ Louvante} = (4000 + 74) / 3 = 1358 \text{ mm}$$

$$X \text{ tot} = 4126 \text{ mm} \rightarrow X \text{ Louvante} = (4126 + 74) / 3 = 1400 \text{ mm}$$

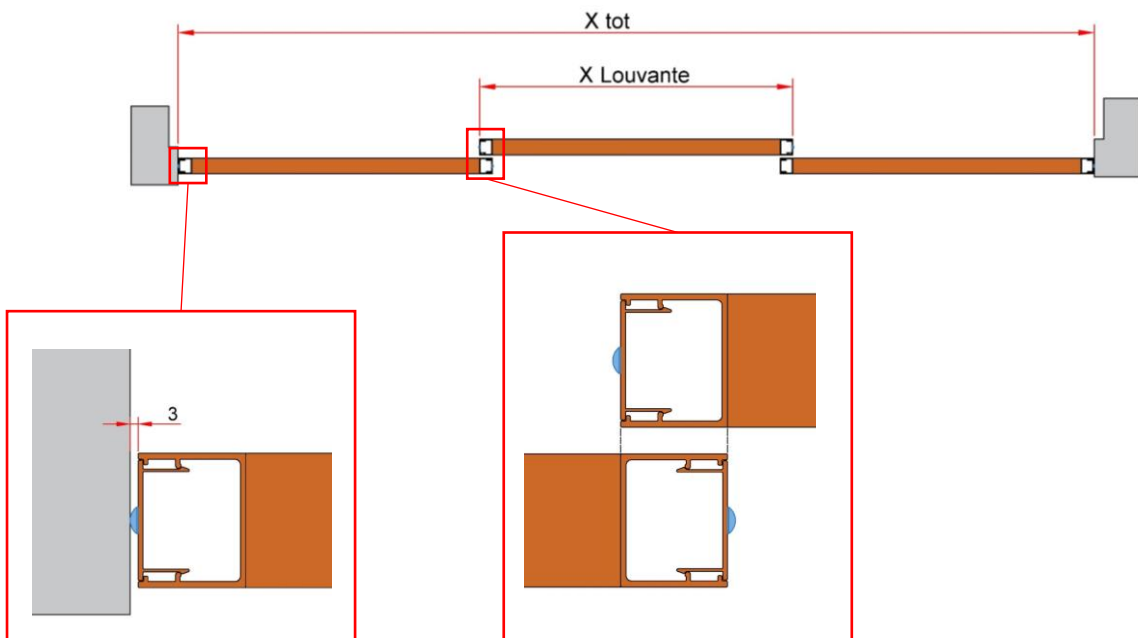


Breedte – Breite – Largeur – Width - combination

$$X \text{ Louvante} = (X \text{ tot} + 71) / 4$$

$$X \text{ tot} = 5329\text{mm} \rightarrow X \text{ Louvante} = (5329+71) / 4 = 1350 \text{ mm}$$

$$X \text{ tot} = 5529\text{mm} \rightarrow X \text{ Louvante} = (5529+71) / 4 = 1400 \text{ mm}$$

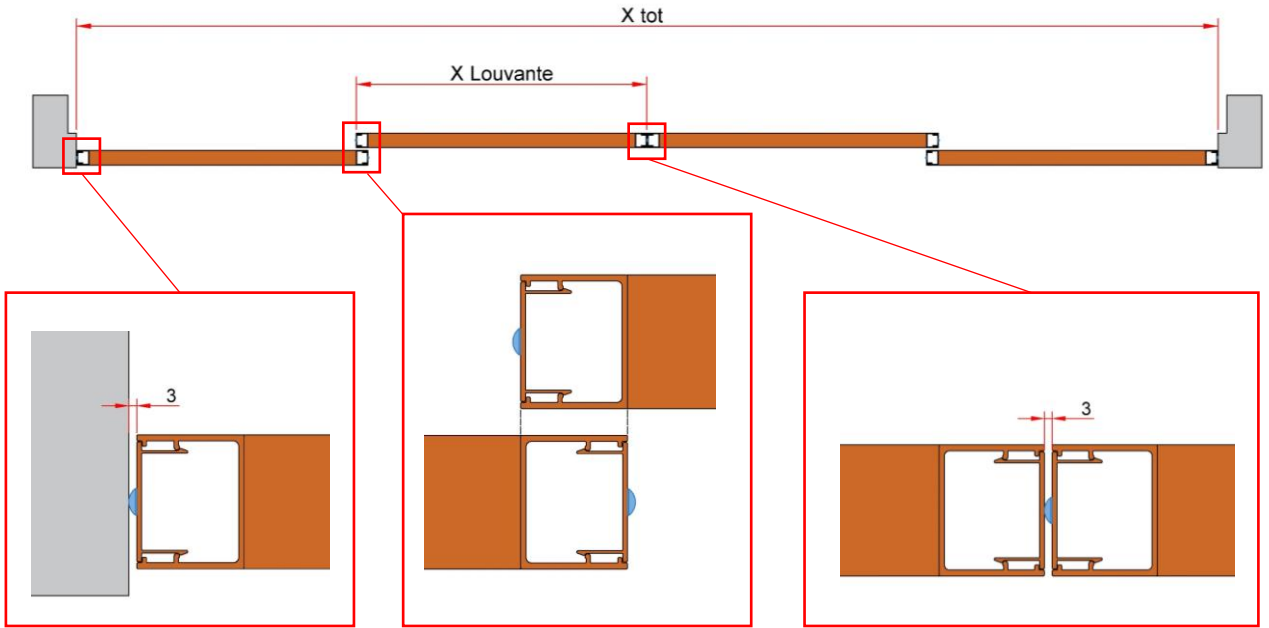


Montagehandleiding / Montageanleitung /
Notice de montage / Assembly instructions





LOUVANTE SLAT REPLACEMENT



Tools

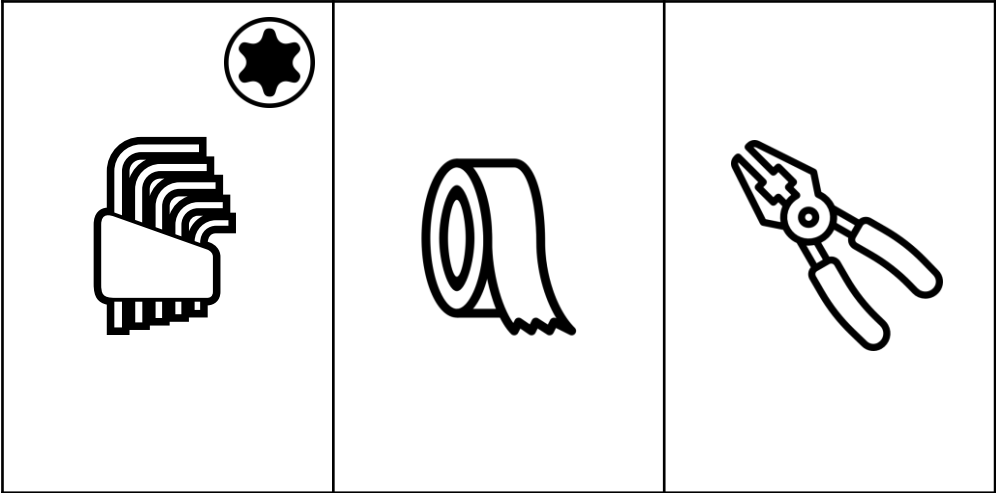

Profielen / Profile / Profils / Profiles

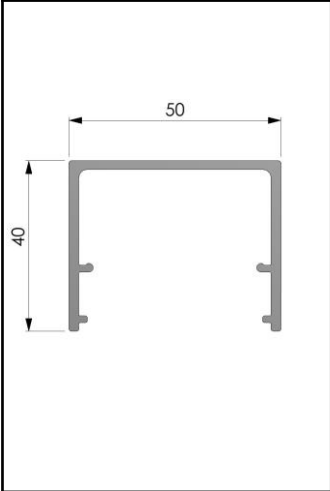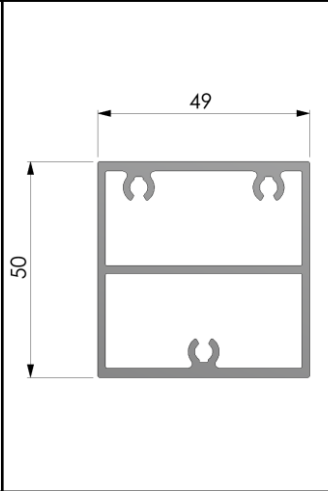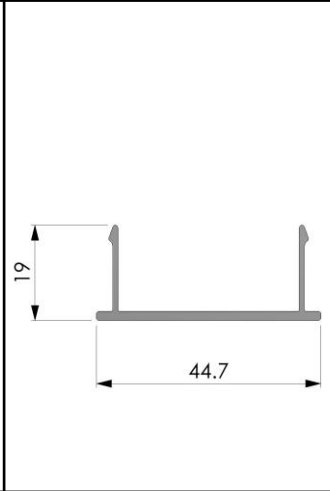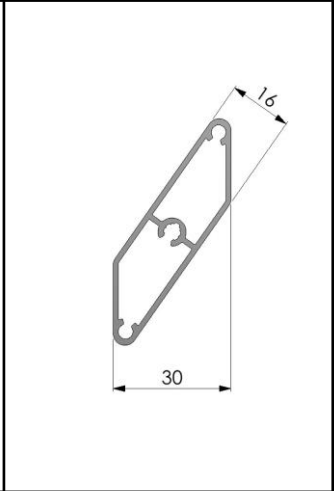			
N89009F	N89011	N89012	N89936

Accessoires / Zubehör / Accessories



V59189



V59190



V59194



4,8 x 22

V70412



V72153




V72156



V72162




V70384

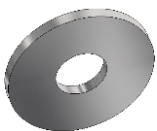


Ø5




V72180

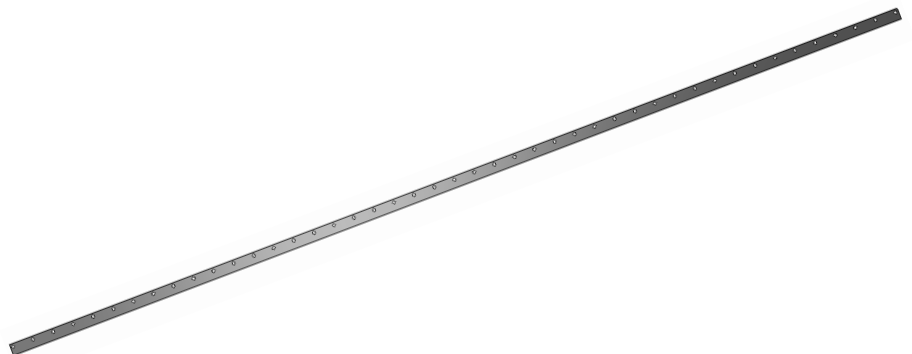

V70383

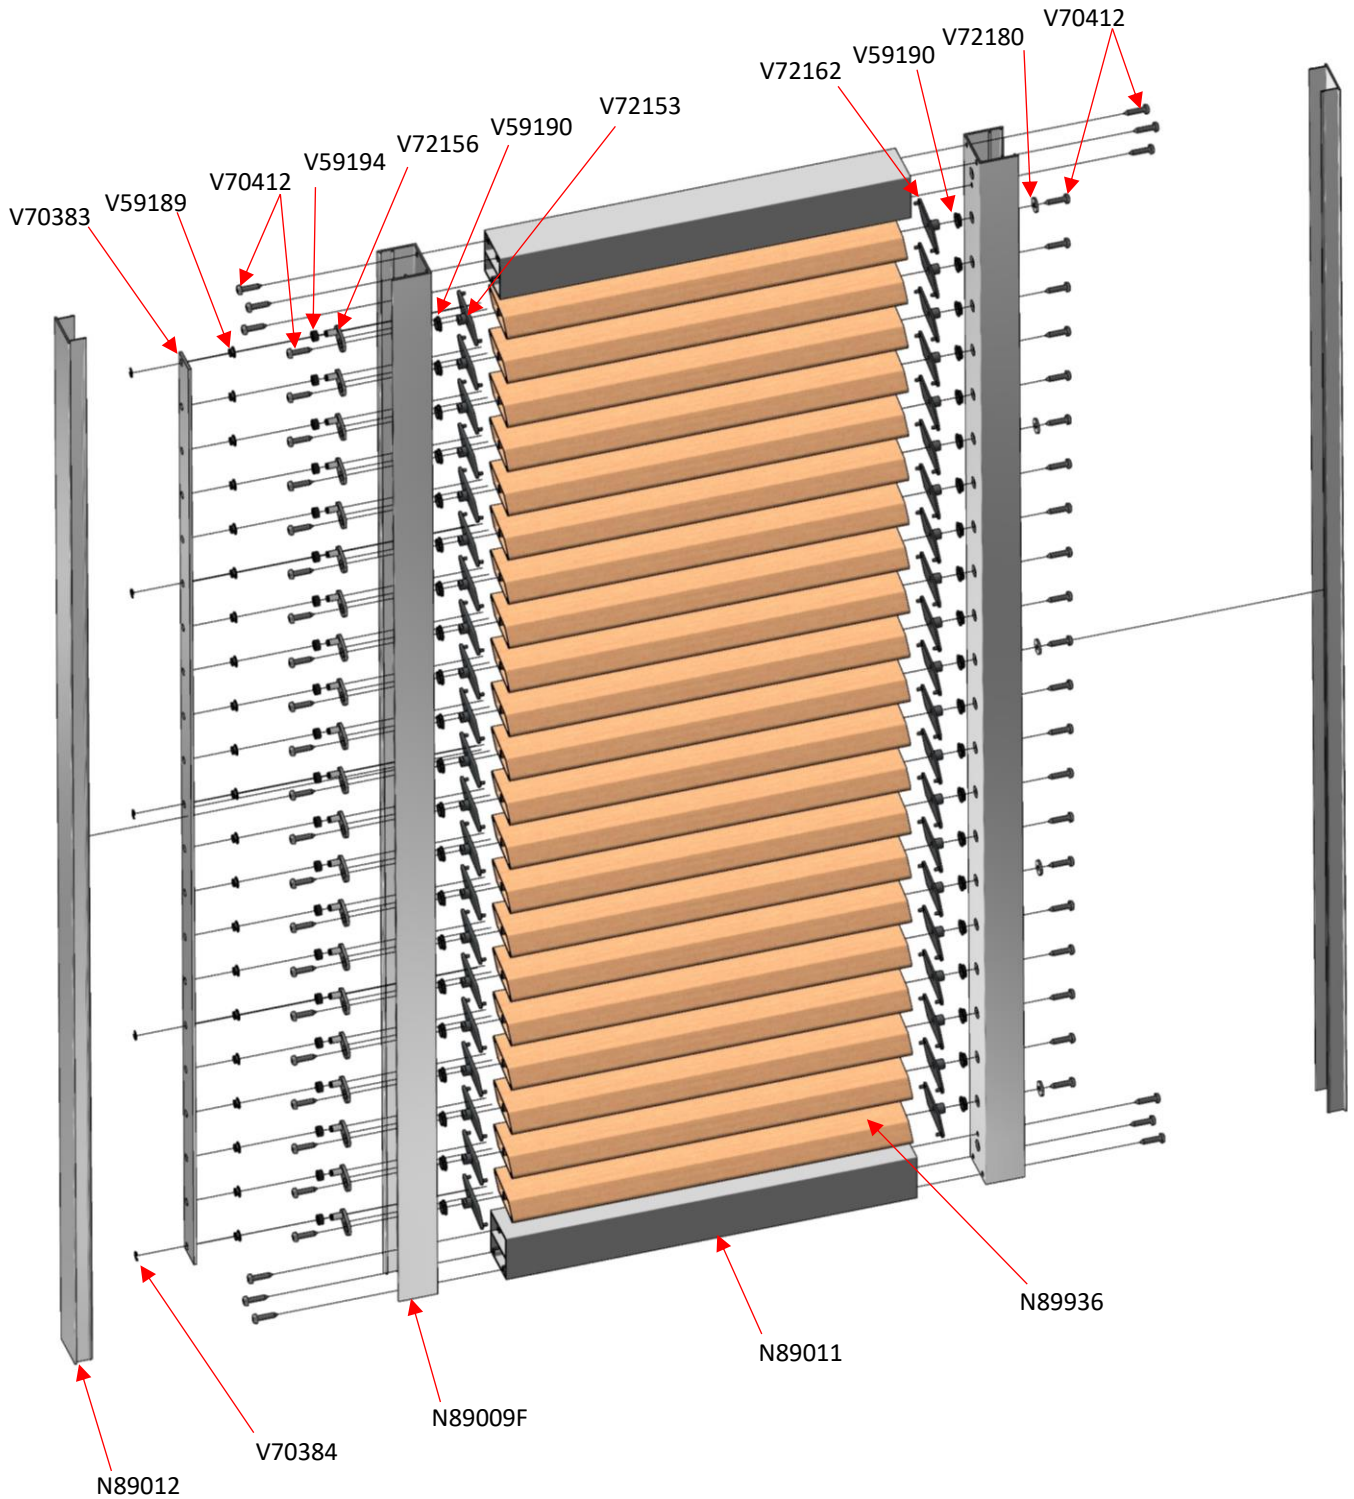


Algemeen / Allgemein / Général / General

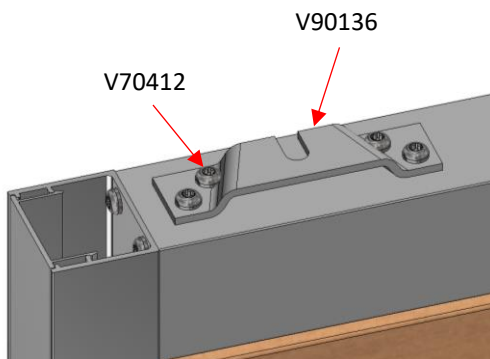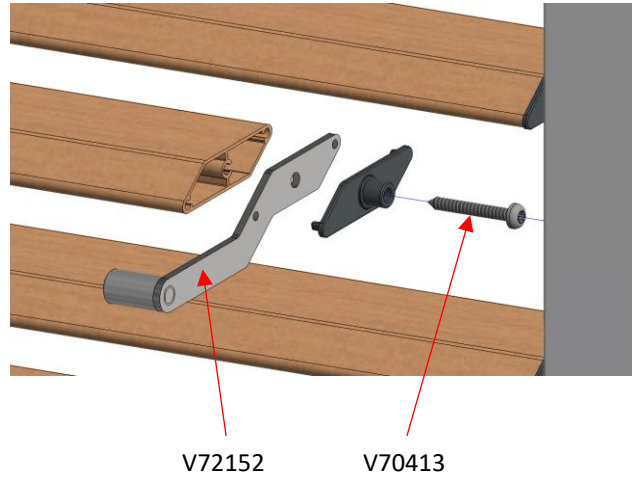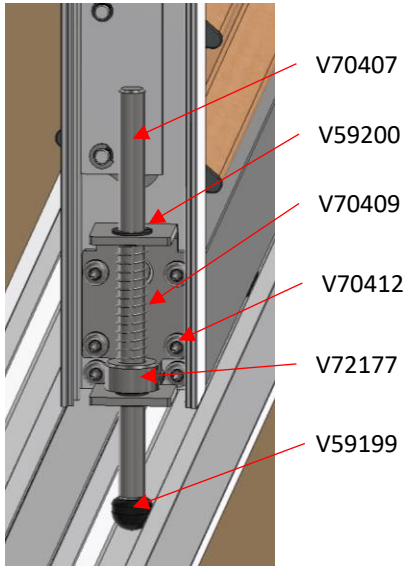


Prepare working area

1

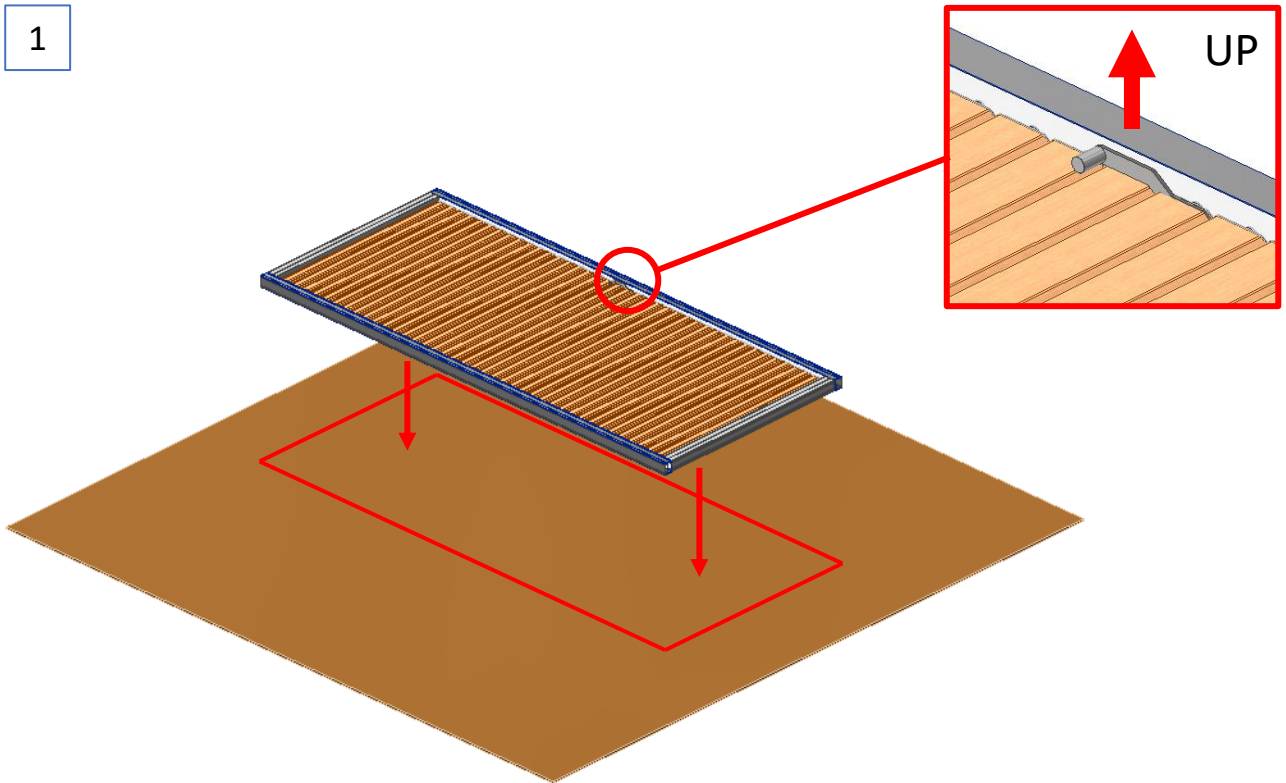


2

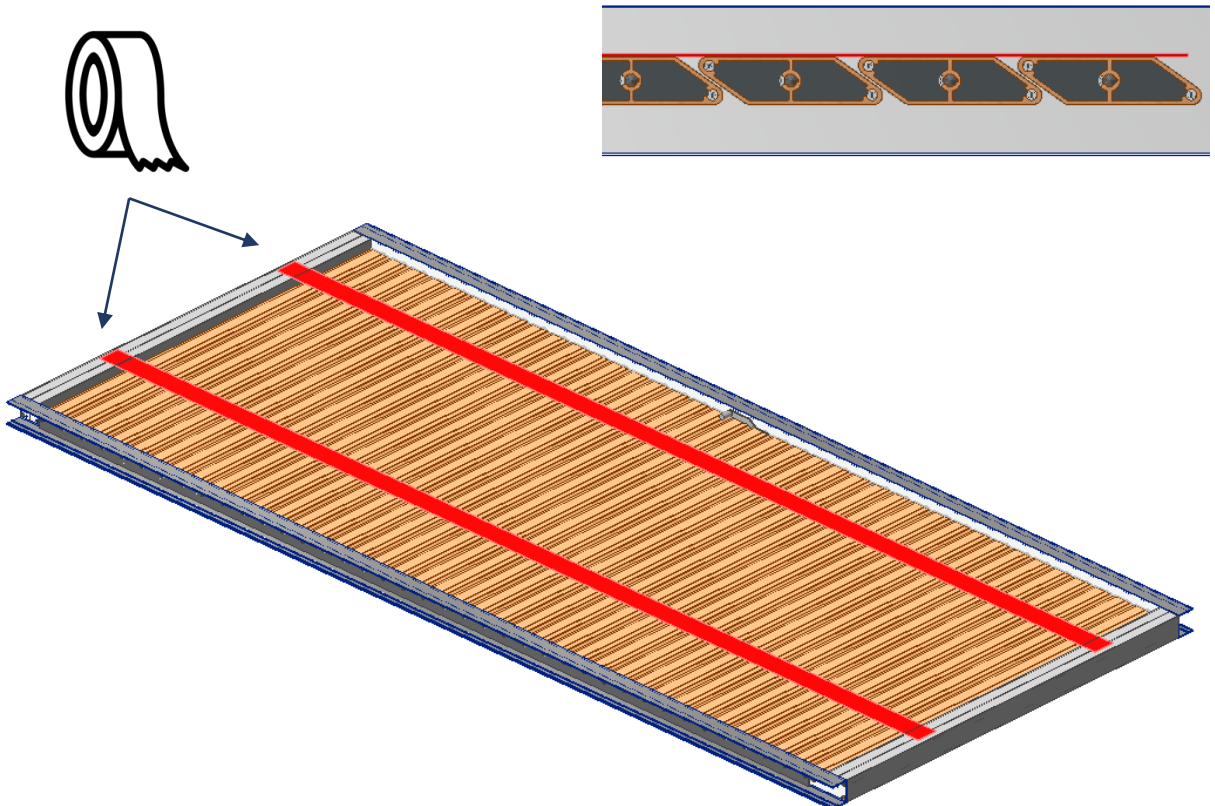


Disassembly


1

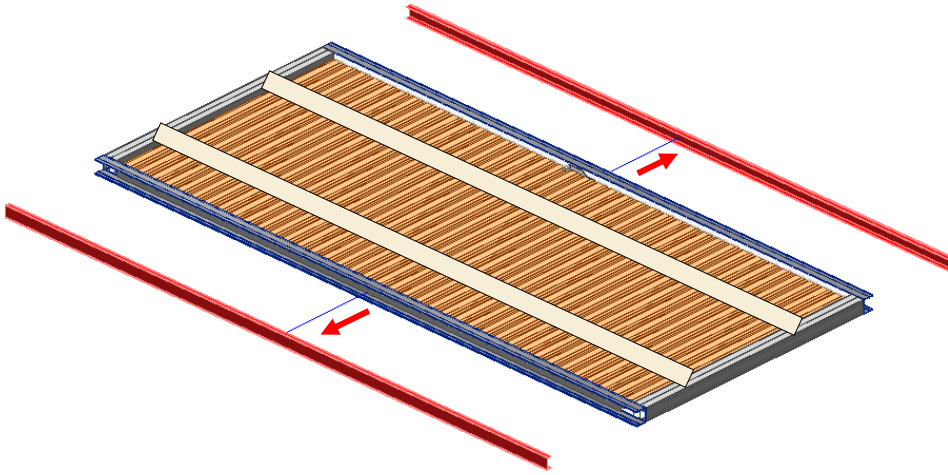

2

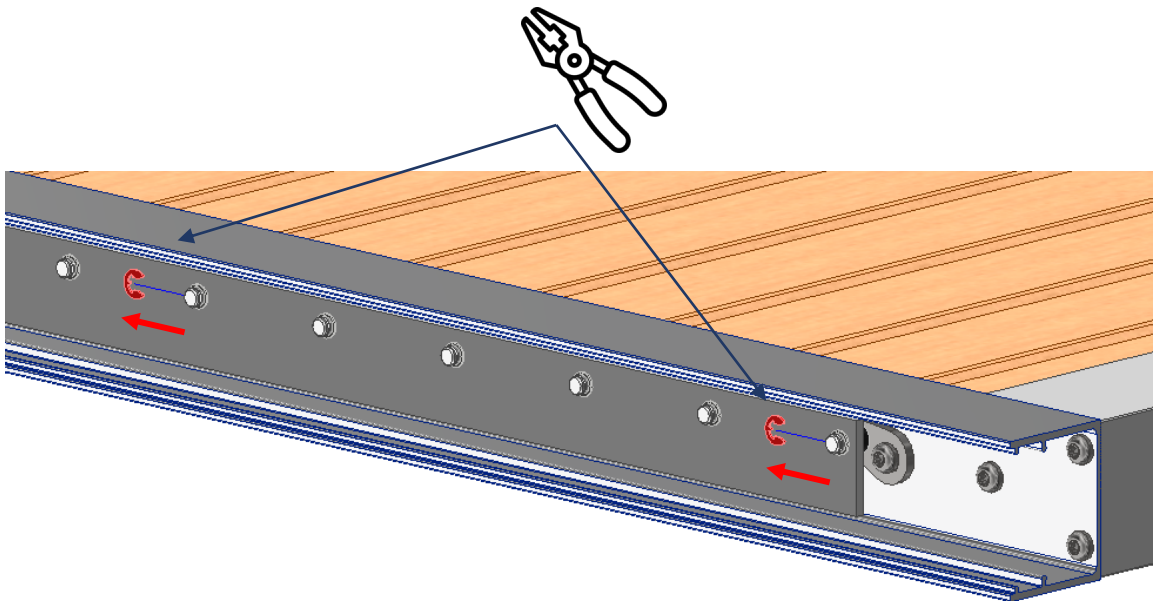


3

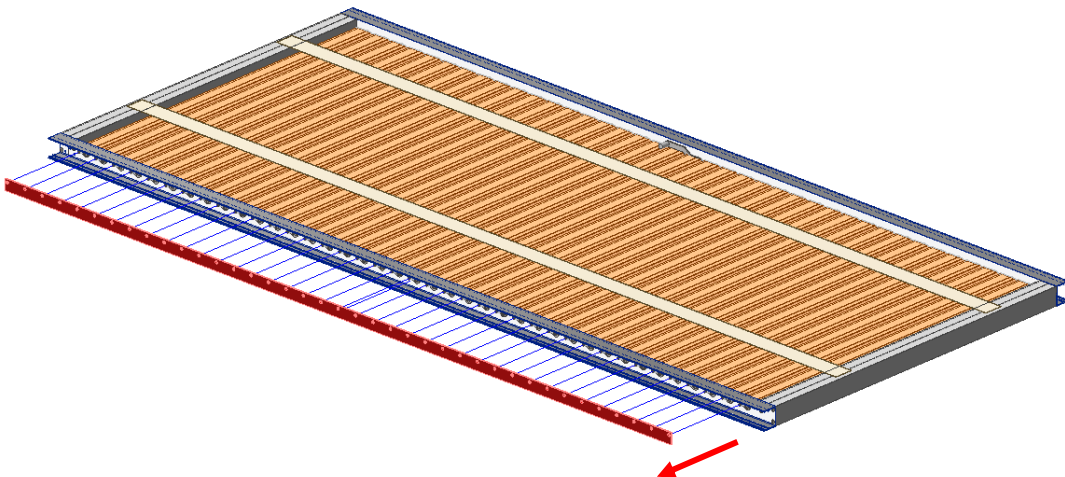


Disassembly

4

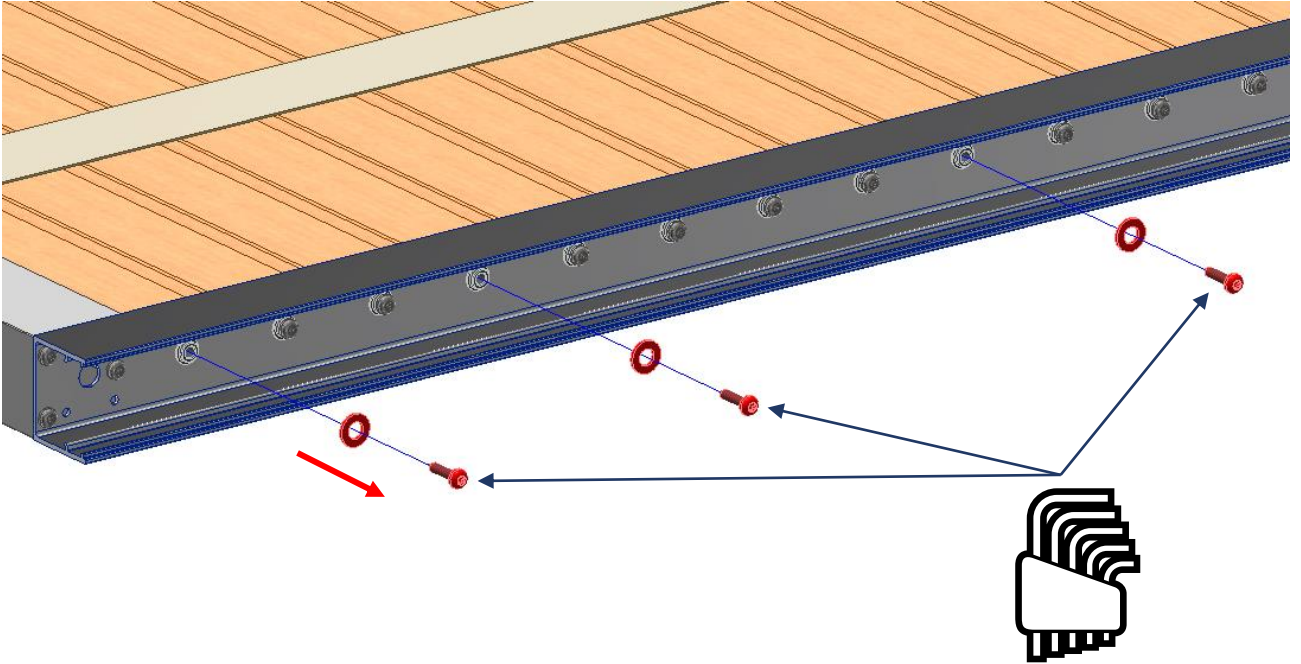


5


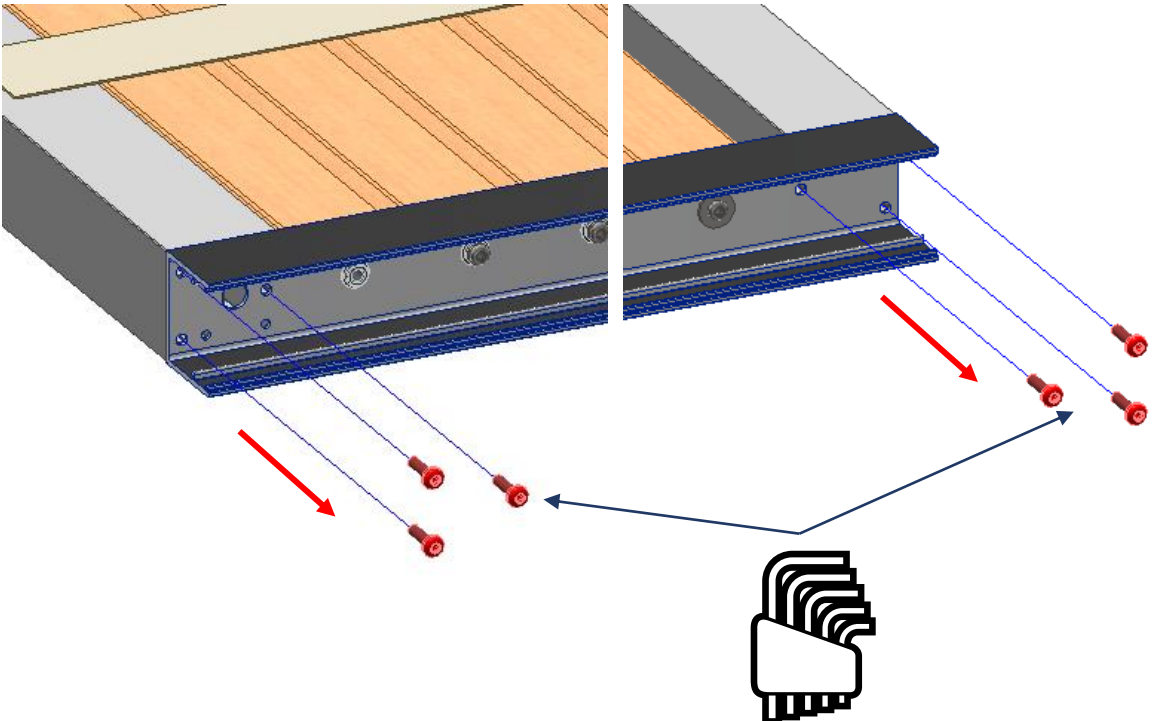


Disassembly

6

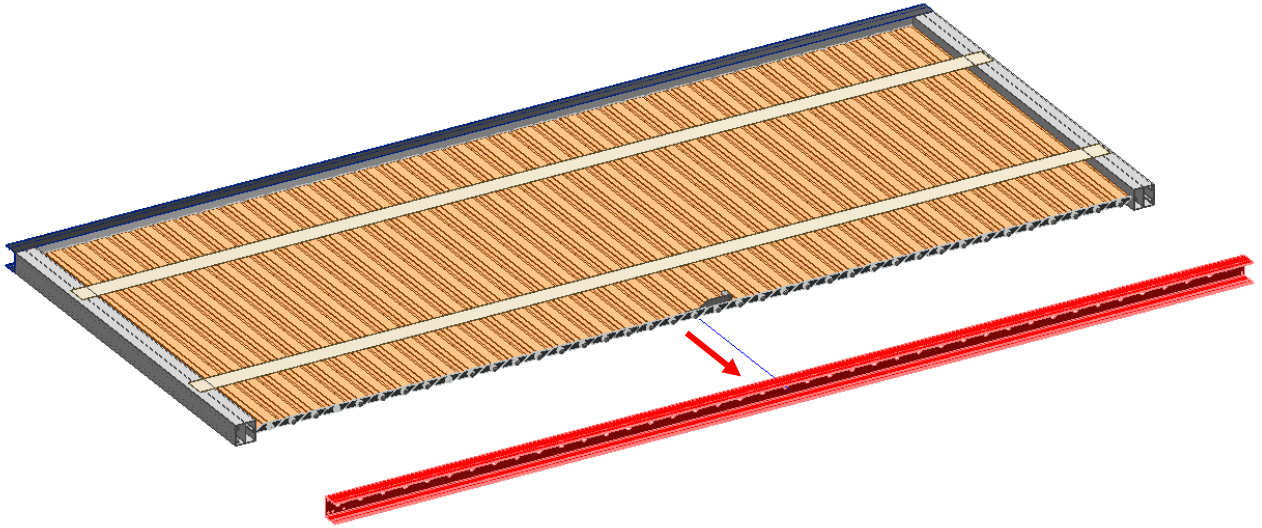


7

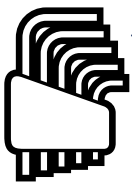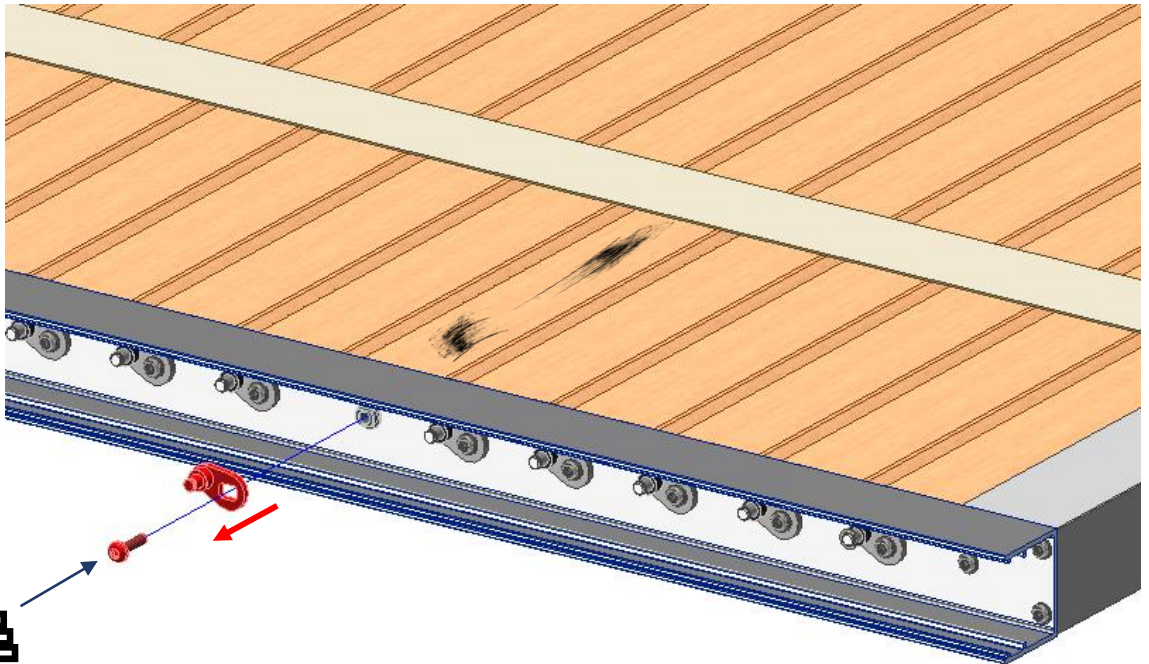


Disassembly


8

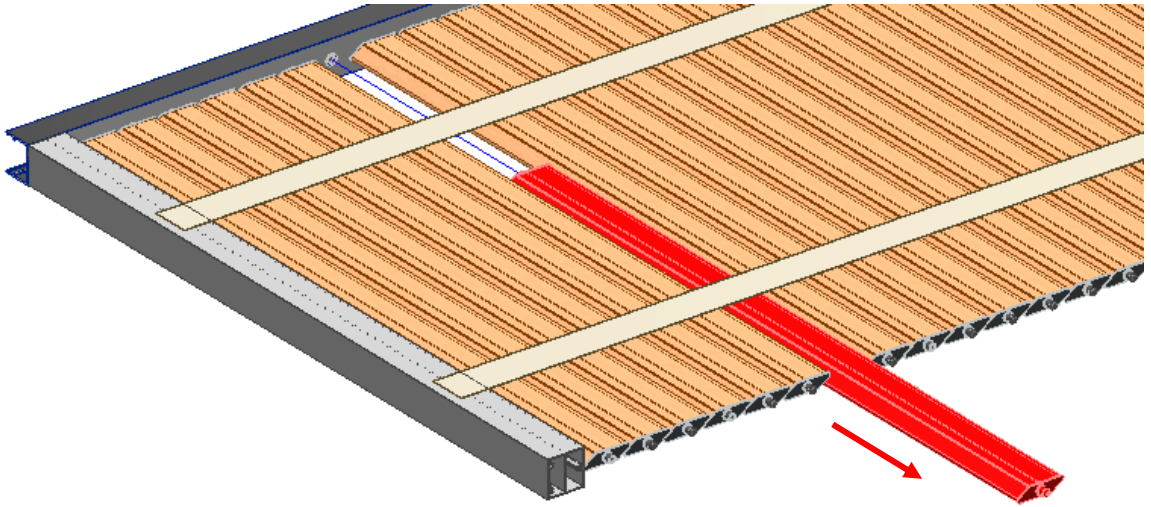

9

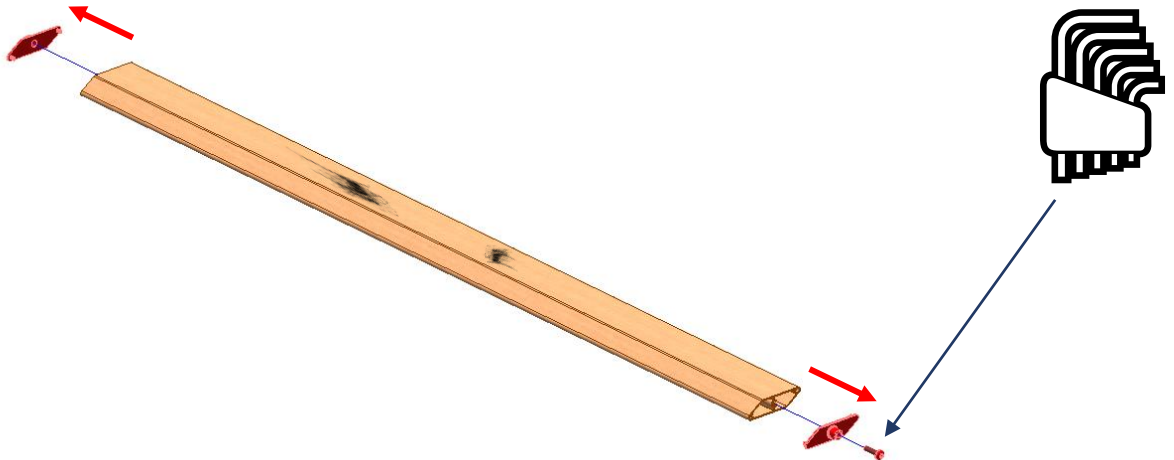


10

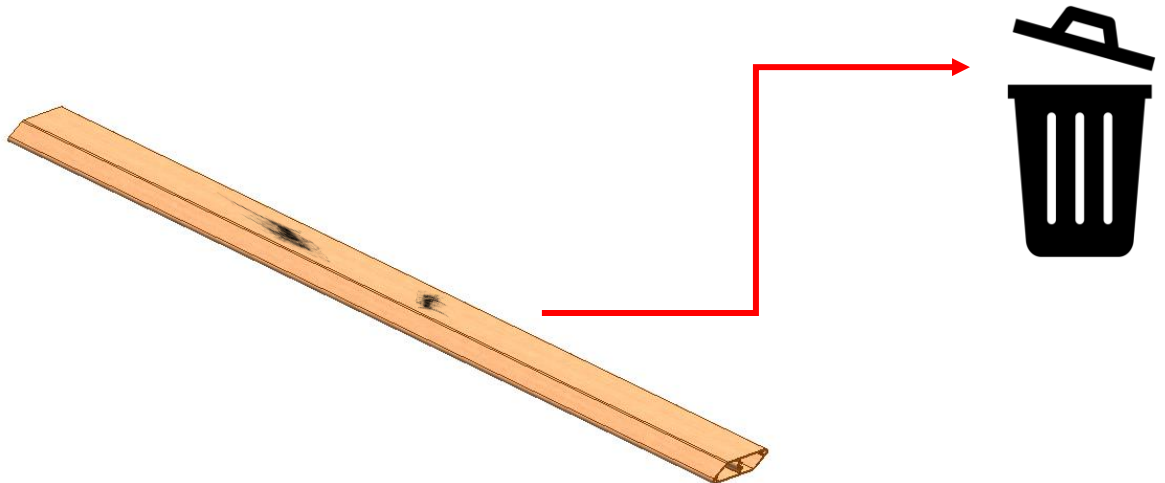


Re-assembly with new slat

1

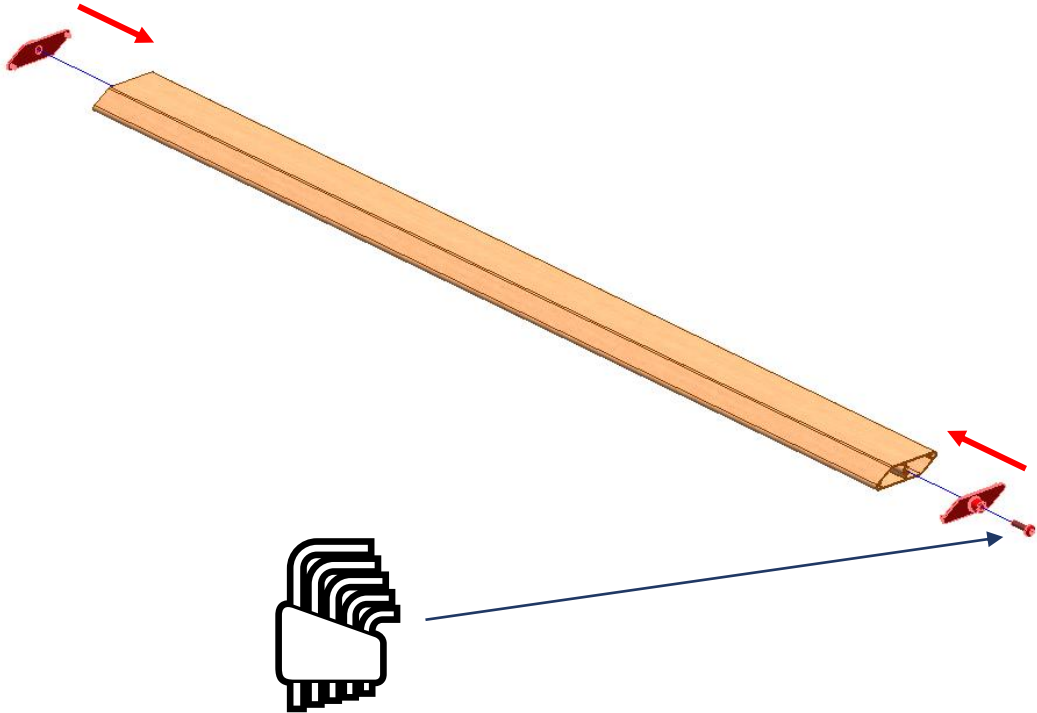


2

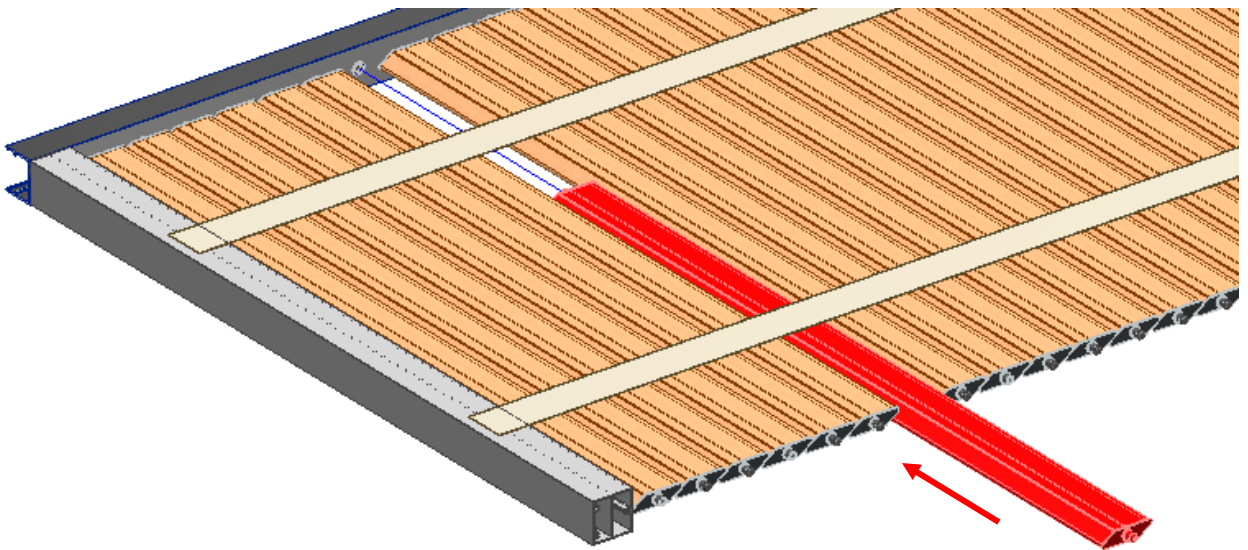


Re-assembly with new slat

3

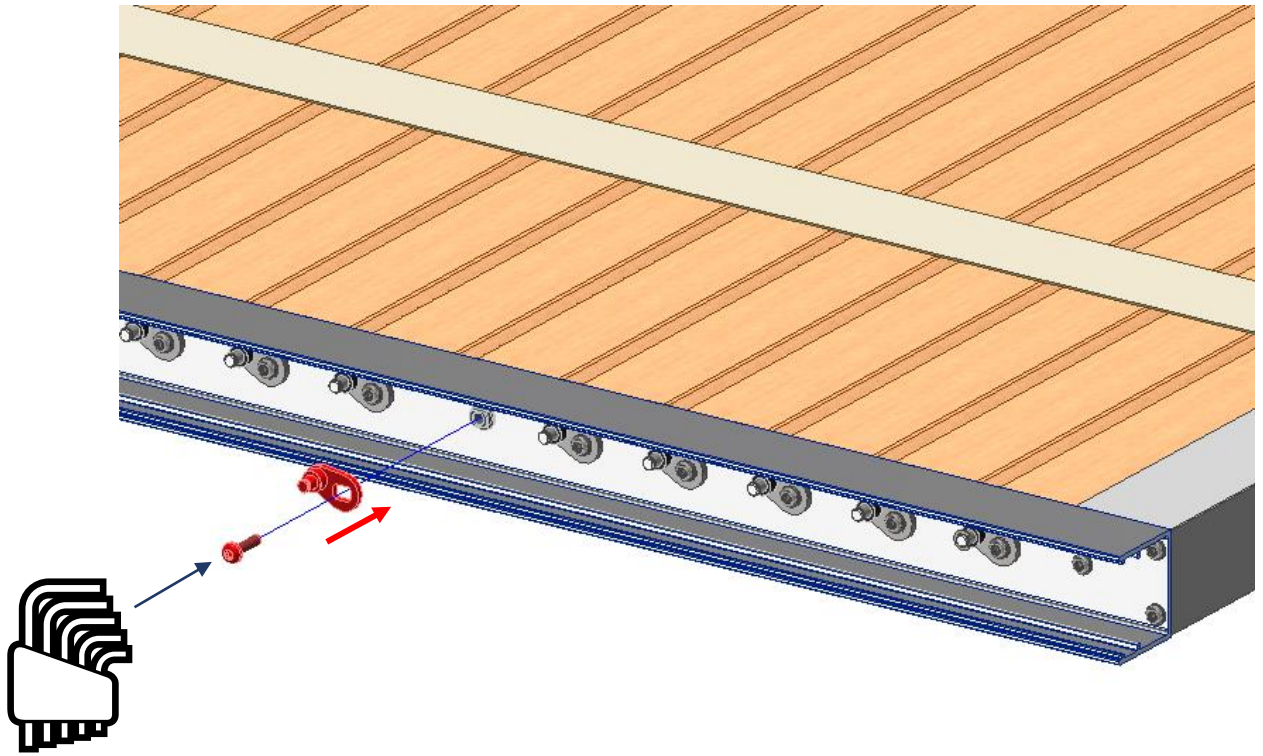


4

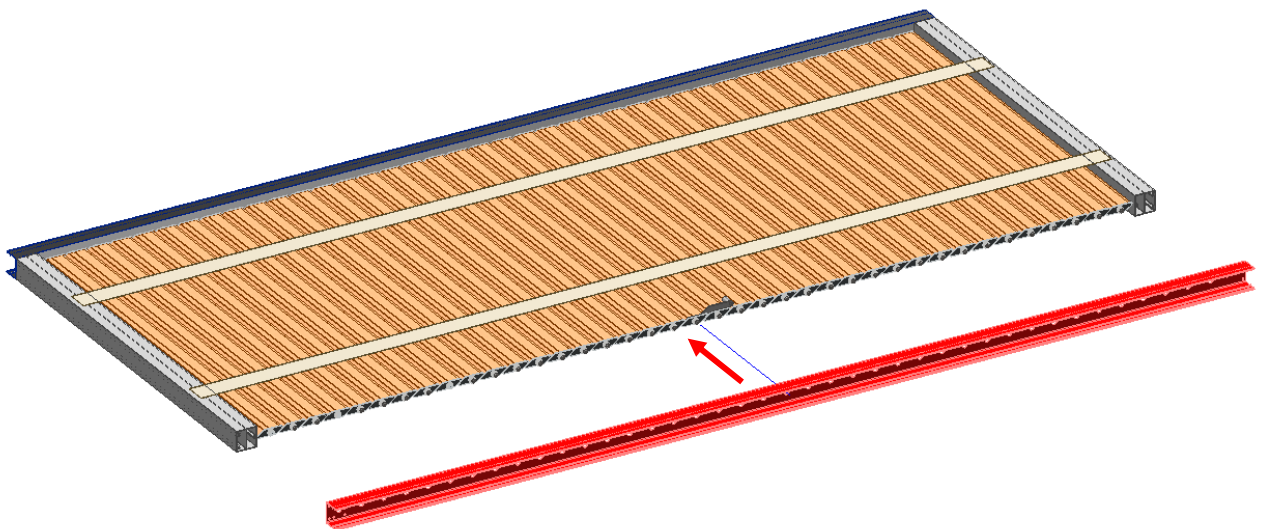


Re-assembly with new slat

7

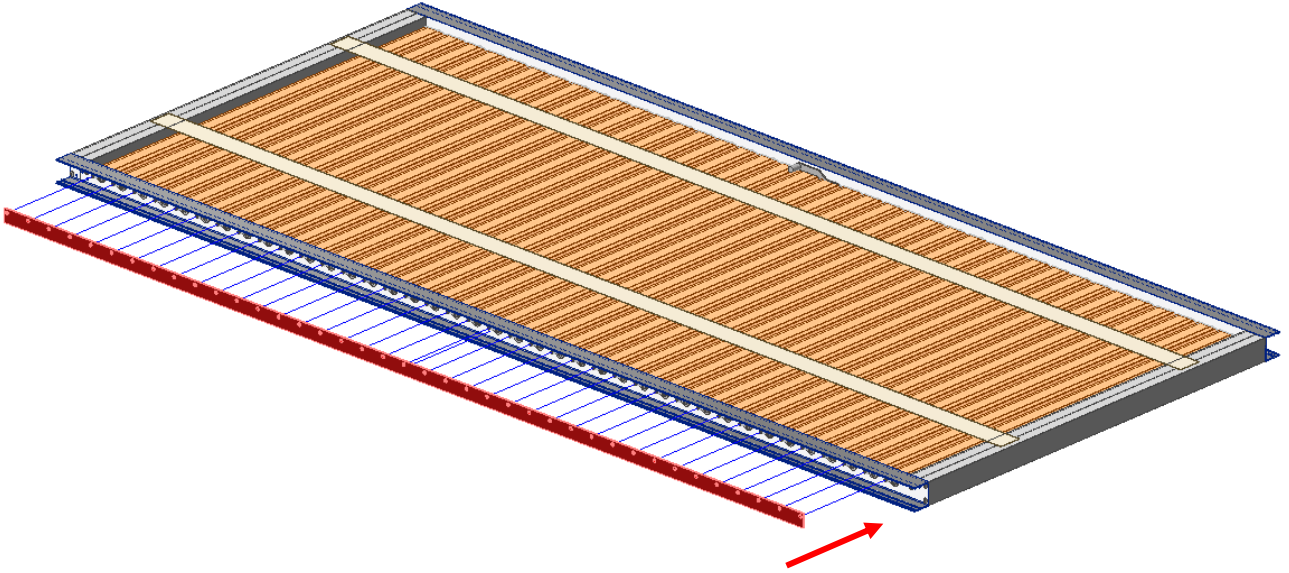

8

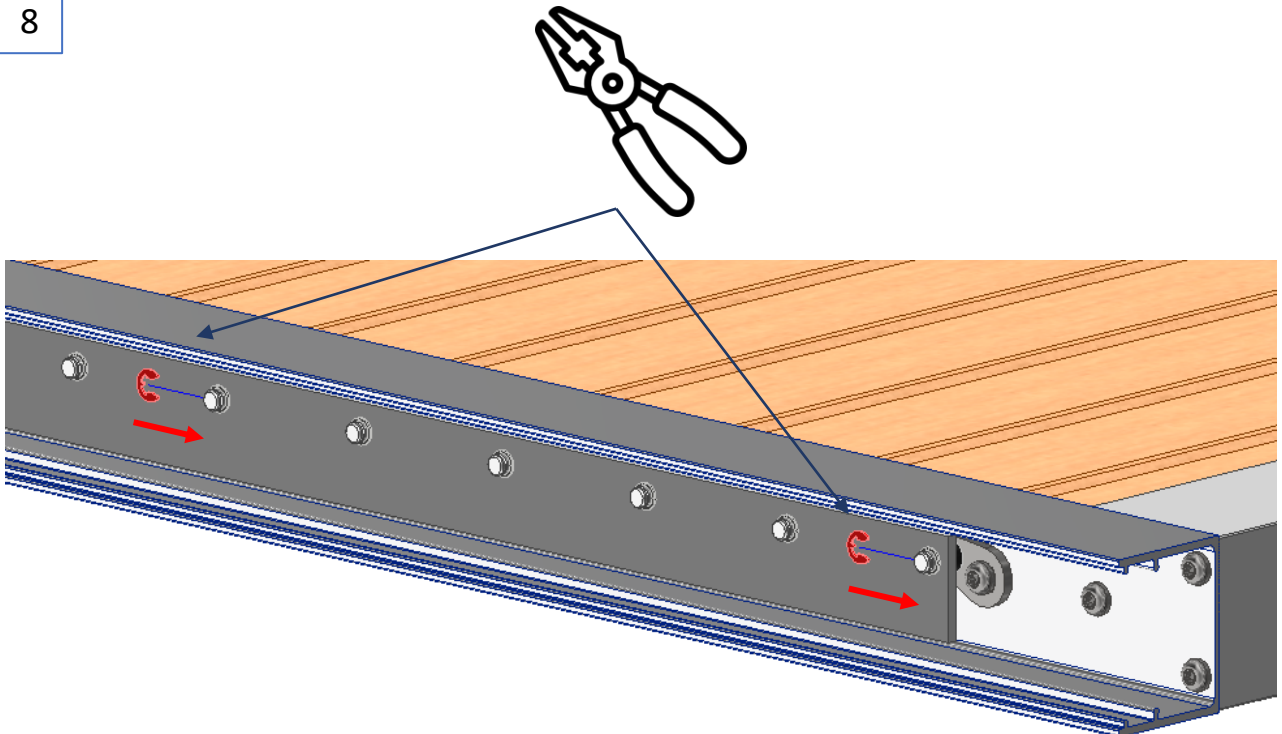

Re-assembly with new slat

9

